

MS Fogger XXL



NL klantenservice

BE Klantenservice/Service Clientéle

DE Kundenservice

DK Kundeservice

IT Servizio clienti

ES Servicio al cliente

UK Customer Service

CA Customer Service

FR Service Clientéle

EX Customer Service Export

+31 (0)497 339 787

+32 (0)14-820713

+49 (0)2833-923630

+45 89884187

035-4490369

+34 931816433

+44 (0)01733592049

+1 866 995-7771

+33 (0)2 99 61 40 40

+31 (0)497 700 278

MS Fogger XXL

Fabrikant:

Schippers Europe B.V.
Smaragdweg 60
5527 LB Hapert

© Copyright 2014

Niets uit deze uitgave mag worden verveelvoudigd en/of openbaar gemaakt worden door middel van druk, fotokopie, microfilm, geluidsband, elektronisch of op welke wijze dan ook zonder voorafgaande schriftelijke toestemming van de firma Schippers Europe b.v.

Content

EN	MS Fogger XXL	
	Manual.....	4

Safety Instructions

Before first use of the machine, read the instructions carefully.

Safety instructions marked with this  symbol must be observed to prevent personal injury or serious damage to property.



WARNING

- This machine has been designed for use with disinfecting agents supplied or recommended by MS Schippers. The use of other disinfecting agents or chemicals may adversely affect the safety of the machine.
- High-pressure jets can be dangerous if subject to misuse. Close distance to the jet nozzles when directed to persons can cause injuries; live electrical equipment or the machine itself can be damaged.
- Do not use the machine within range of persons unless they wear protective clothes.
- High-pressure machines shall not be used by children or untrained personnel.
- High-pressure hoses, fittings and couplings are important for the safety of the machine. Use only hoses, fittings and couplings recommended and approved by the manufacturer of this machine.


- To ensure machine safety, use only original spare parts recommended by the manufacturer.
- Don't use the machine if a supply cord or important parts of the machine are damaged, e.g. safety devices, high-pressure hoses etc.
- Switch off and unplug the machine when leaving it unattended, when finished using it or when doing repair and maintenance.
- Never start a frozen machine
- Supervise children not to play with the machine.
- Always wear safety boots, respiratory mask, goggles and protective clothing during operation.
- During use of high-pressure jets, aerosols are formed. Inhalation of aerosols can be hazardous to health, for the protection against aerosols a respiratory mask of class FFP 2 or equivalent may be needed, depending on the disinfecting agents.

User Guide

Provides a general overview of the machine and operation elements along with illustrated sections on preparation, operation and user maintenance.

Transportation

The ULV++ machine can be moved on its own wheels or with a forklift. When moving it with a forklift, use the appropriate fork openings (1-1), rubber pads (1-2) inside the fork openings reduce slipping danger.

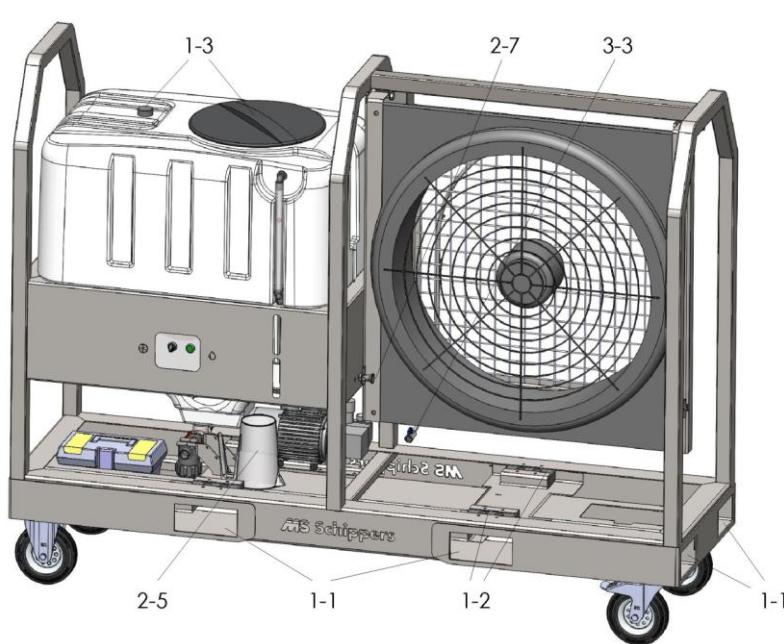


Preparation

- Before use, always inspect the machine and equipment for damages. In case of damages, act according to listed warnings.
- If the machine is dirty, clean it beforehand. In particular the filling covers/lid (1-3) and around them (on top of the plastic tank), so that unnecessary dirt in the tank will be prevented.
- Maintenance of the machine should always be done when starting up after long time of storage.
- Inside/on top of the main tank (2-1), a smaller rinse tank (2-2)(water) is mounted. Check whether this tank is empty, if not and the water inside is




- If the water been held in the tank for a long time, drain it into the larger tank using the the rinse valve (2-3).
- Check whether the tank is empty, if not empty the tank using the drain valve (2-4)(underneath the tank). If the residue is mixed with chemicals, ensure adequate collection and processing of the liquid.

- Place the machine where it will be used, with a full tank it is more difficult to move.
- Close the rinse valve (2-3) and close the drain valve (2-4) before filling the tanks.

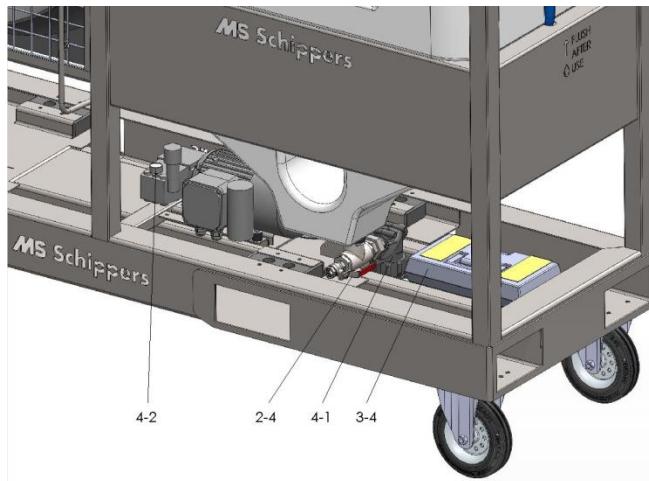

- Before filling the tanks, make sure the filling hose near the machine is clean of dirt.
- Flush the filling hose with sufficient clean water before filling the tanks.
- Remove the filler covers/lid from the rinse tank and the main tank, fill the (smaller) rinse tank with clean water.
- If the machine has not been used for a long time, please start it up with a bit of clean water without chemicals. Inspect the high-pressure nozzles (following the start up procedure) for any clogging or other technical inconveniences. In case of irregularities, check the maintenance list.
- Prepare the disinfecting agents. For filling you may use the included measuring cup (2-5), pour the disinfecting agent into the main tank. Make sure the measuring cup is clean before and after use!

- Fill the main tank with the required amount of water according with the MS-Schippers disinfecting agent specification. Use the level indicator (2-6) for leveling. You can place the filling hose in the holes provided for this in the tank opening to prevent the hose from slipping.

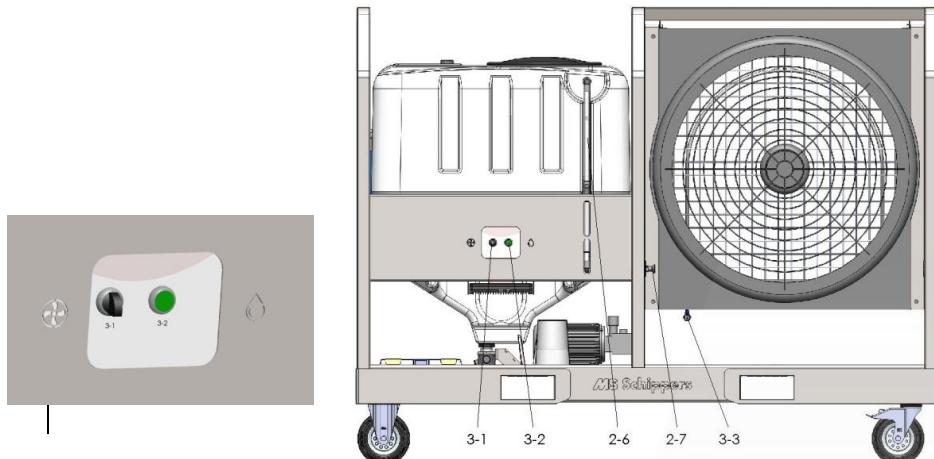

- Close the filler covers/lid from the rinse tank and the main tank.
- Place the machine ventilator in the correct direction, for the appropriate tilt setting, pull the tilt latch (2-7) before adjustment.

Startup

- Place the plug in an earthed socket. The red lamp under the tank will light up, this is a low pressure alarm.
- Make sure the place/room for disinfection is hermetically sealed.
- Switch on the fan using the off/on *fan switch (3-1)*. With an EC motor fan it takes a few seconds before the fan starts up!
- Switch on the high-pressure pump. Press the *high-pressure pump button (3-2)* and keep it pressed for a few seconds until the red lamp turns off. To speeds up startup when starting up with empty system (no water in the high-pressure pipework), open the *flush valve (3-3)* under the fan, keep the button pressed until there is a steady flow of liquid. Then close the valve, the pressure in the system increases and the red lamp turns off, you can now release the push button.
- Check the correct operation of the nozzles, in case of irregularities press the *high-pressure pump button (3-2)* again to switch it off manually. In case of irregularities check the maintenance list.
- When operating correctly, leave the room and close the door.
- When the liquid has been nebulized, the pressure drops and the high-pressure pump stops automatically. The red lamp lights up again.
- If the machine is not used in the next room/place within a reasonable time (24h), start the 'rinsing' procedure.
- If the machine is to be used in a next room/place, stop the fan, remove the power plug from the socket, and move the machine to the next room/place.
- Repeat all steps from the 'preparation' procedure.

Rinsing

- Open the *rinse valve (2-3)* and the *filling covers/lid (1-3)* until the *rinse tank (2-2)* emptied into the main tank.
- Close the *filling covers/lid (1-3)*.
- Follow the 'Startup' procedure.
- When rinsing has finished, stop the fan, remove the plugs from the socket and move the machine to storage area.




Maintenance, inspection and repair

Maintenance of the machine should always be done when starting up after a long time of storage.

- Replacing blocked nozzle, in the *maintenance box (3-1)* you can find spare nozzles and the nozzle tool to turn the nozzle on and off. Blocked nozzles can be cleaned with compressed air and/or in an ultrasonic liquid system.
- When the high-pressure pump stops during operation check the *Arag filter (3-2)* underneath the tank. Clean or replace the *filter (4-1)* when required.
- Keep the machine clean and frost free to avoid damage.
- Operating pressure can be monitored on the *manometer (4-2)*, depending on nozzle type the high-pressure pump operates at 60-100 Bar.

Dimensions

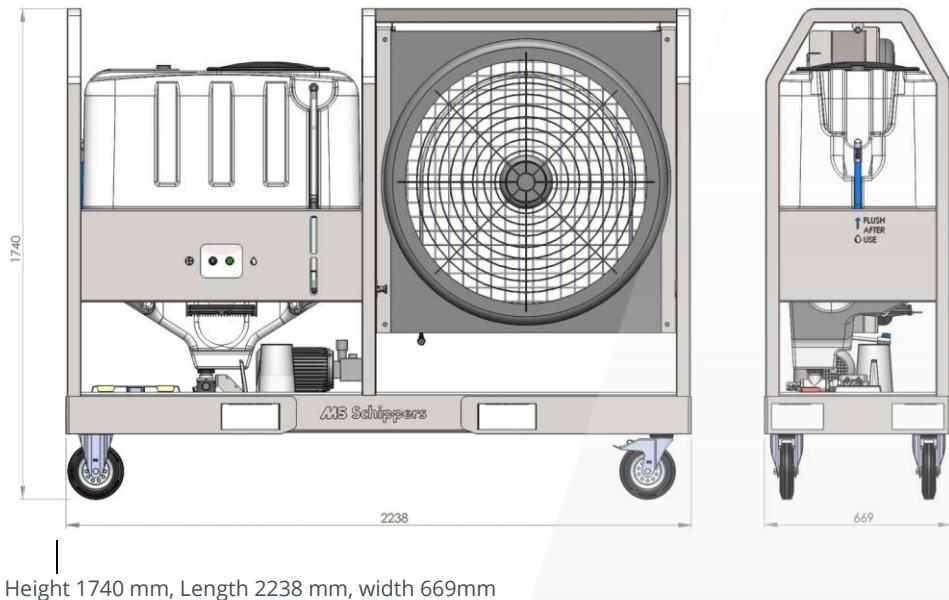



NL klantenservice
BE Klantenservice/Service Clientéle
DE Kundenservice
DK Kundeservice
IT Servizio clienti
ES Servicio al cliente
UK Customer Service
CA Customer Service
FR Service Clientéle
EX Customer Service Export

+31 (0)497 339 787
+32 (0)14-820713
+49 (0)2833-923630
+45 89884187
035-4490369
+34 931816433
+44 (0)01733592049
+1 866 995-7771
+33 (0)2 99 61 40 40
+31 (0)497 700 278