

## Solarpanel connection.

picture connection

.....(model or brand can change)



- +

solarpanel

picture solar charge controller

.....(model or brand can change)



+ - + -

solarpanel battery

See also marks on panel - (negative) + (positive)

### How to connect :

- At first connect the solar charge controller onto the battery, use a part of supplied cable, now controller recognize the currency of battery
- Second: connect solarpanel to solar charge controller with supplied cable.
- At last connect LaserOp Automatic to battery

Take care + (positive) and - (negative) polarity never touch each other

Take care positive and negative are always correct connected.

**Keep Solar charge controller dry at all times!**