




One-stop-shop for livestock farmers

MS Spreader Mini

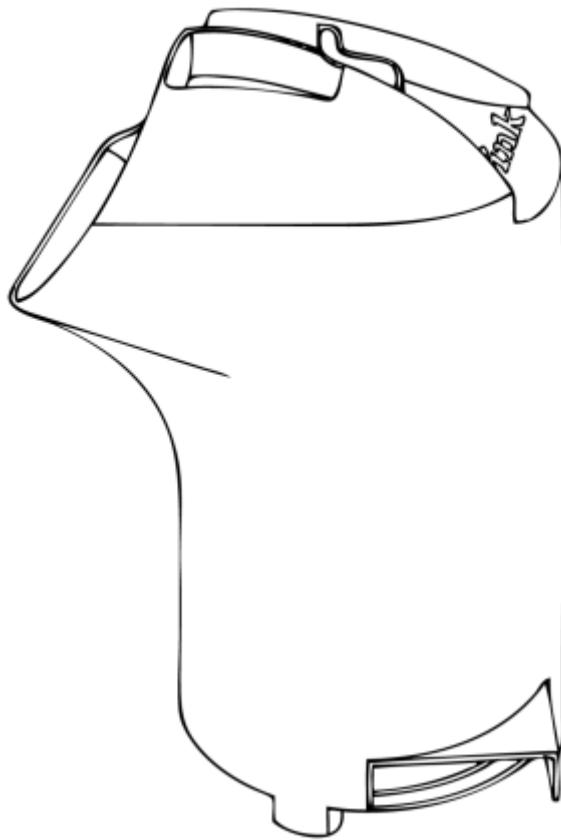

Schippers Europe BV
Smaragdweg 60
5527 LB Hapert
The Netherlands
www.msschippers.com
E: export@schippers.eu
T: +31 497 339774

MS Spreader Mini:

The MS Spreader Mini is a useful tool to spread beddings for animals with many kinds of drying powders like calcium. The spreader is driven by a drill machine on a battery. The MS Spreader Mini is designed so that the most common drill machines fit and comply with European guidelines. The flow-through opening to the ejector mechanism is adjustable in size.

Technical details:

Contents:	12 Liter
Filled weight:	8-10 KG
Empty weight:	3 KG
Material:	LDPE
Min. required speed:	600 rpm
Min. mounting diameter drill required:	13mm

Safety regulations:

- Be aware of dust, use the correct walking direction
- The device should only be used by qualified personnel
- Avoid injury from the moving parts (spreading mechanism, cordless drill) of the spreader when it is in use.
- Do not scatter moist bedding materials
- Do not sprinkle in the direction of other persons
- Remove the cordless drill first when removing foreign objects that have become lodged in the spreading mechanism.

Using the spreader:

- Fill the spreader with scatter material/lime, make sure that no foreign objects such as stones get into the spreader
- Place the supplied tool in the cordless drill and slide it over the drive shaft
- Set flow opening
- The supplied carrying strap must be buckled to size in such a way that the drill is operated with an almost stretched arm
- The spreader is now ready for use


Attention: The MS Spreader Mini is not suitable for scattering sawdust and other chopped products.

Maintenance and repair:

The powder spreader does not require maintenance, but the spreading mechanism can be replaced in case of damage or wear. Remove the cordless drill, the nuts on the outside of the container can be loosened, after which the slide of the adjustable opening can be removed. After which the spreading mechanism can be removed and a new one can be mounted.

Spare parts:

1 Spreader	ps01
2 Container	ps02
3 Tool	zs03
4 Carrying strap	zs04
5 Slide with attachment	ps05

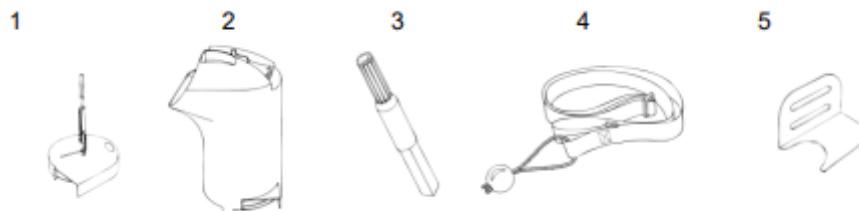

If in doubt about operation, please contact the manufacturer or your dealer.

CE

Hereby declares that, the MS Spreader Mini

- Complies with the provisions of the Machinery Directive 2006/42/EG as last modified;

Guarantee:

Under normal use, The Schippers Group guarantees a warranty for a period of one (1) year from the invoice date on the complete MS Spreader Mini against manufacturing and/or material defects. No warranty is given in defects are the result of:

- Normal wear and tear
- Improper use
- Repairs by unauthorized persons
- External influences such as fire, water and abnormal environmental conditions and mechanical damage from shock or fall

If a defect occurs in the device during the warranty period, The Schippers Group will replace the defective parts free of charge. When the device or the defective parts are repaired, these must be sent to The Schippers Group carriage paid.