

Passion for Farming

Digi Doser Duo General 2

4315013

EN Digi Doser Duo General 2
Operating instructions 2

MS Schippers

4309538/28-12-2015/F



Digi Doser Duo General 2

FOREWORD

Product description

Digi Doser Duo General 2 is a dosing system for adding both Di-O-Clean and additives to drinking water systems. The system is equipped with 2 digital diaphragm pumps, which dispense the right amount of Di-O-Clean and/or additives in the water pipe, based on pulses from a water meter. The dosing system is especially designed to dispense Di-O-Clean and additives in a simple and accurate way, simultaneously or sequentially, and without need to change products.

TABLE OF CONTENTS

Foreword	2
Product description.....	2
Table of contents	2
1. The device	3
1.1 Diagram of parts.....	3
1.2 Parts list.....	5
1.3 Articles included	6
2. Installation instructions	7
2.1 Preparation	7
2.2 Mounting the water supply and dosing pumps	8
2.3 Fitting the device.....	9
3. Setting the device into operation	11
3.1 Venting and starting the device.....	11
3.2 Technical data for the pump	13
4. Settings	13
4.2 Modifying dosage	17
4.2 Modifying dosage	21
5. Maintenance	22
5.1 Cleaning the pump	22
6. Trouble shooting	22

Guarantee


- The firm Schippers guarantees this product against manufacturing defects for a period of 12 months.
- The guarantee applies to both mechanical and electronic components as well as for working hours.
- Shipments to the user are covered by the guarantee.
- Movements are at the user's risk.
- The guarantee is valid for the first owner, at the original place of installation.

Excluded from the guarantee:

- Damage caused by improper installation, faults in the pipeline and high water pressure or pressure surges.
- Damage caused by frost, fire, accident, unreasonable use or negligence on the part of the user.
- Damage caused by the presence of iron, water hardness, algae, organic matter or other substances in the water for which the appliance is not suitable. In some cases, water treatment should be provided.

1. THE DEVICE

1.1 Diagram of parts

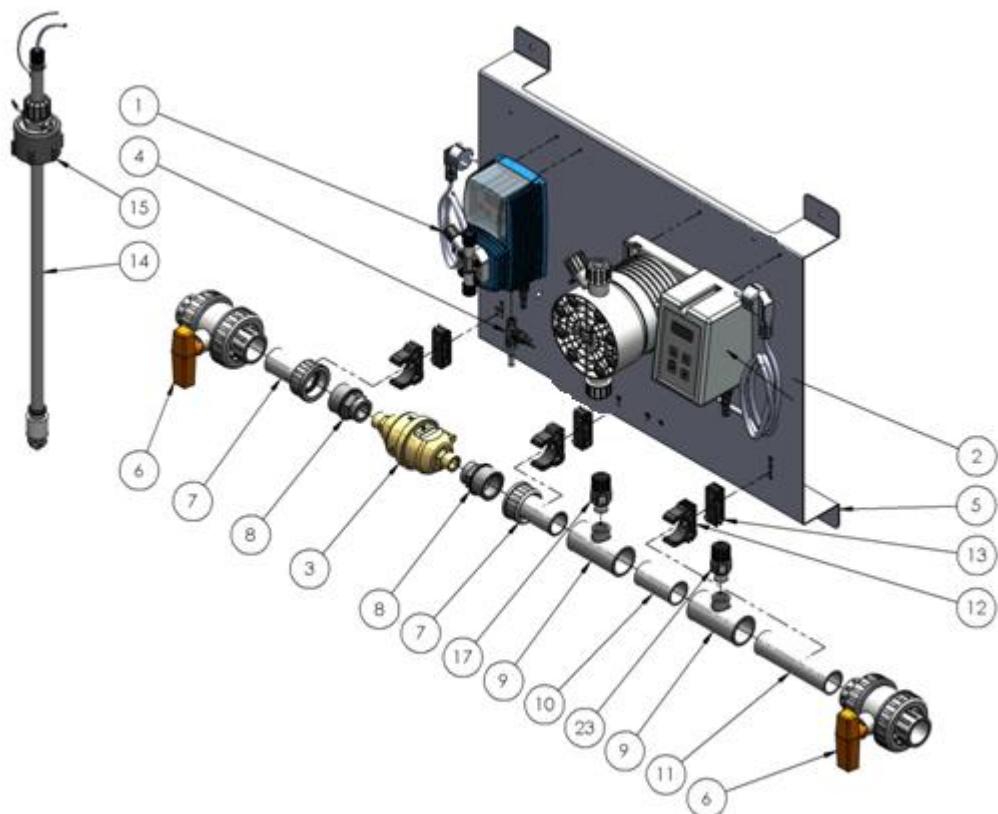

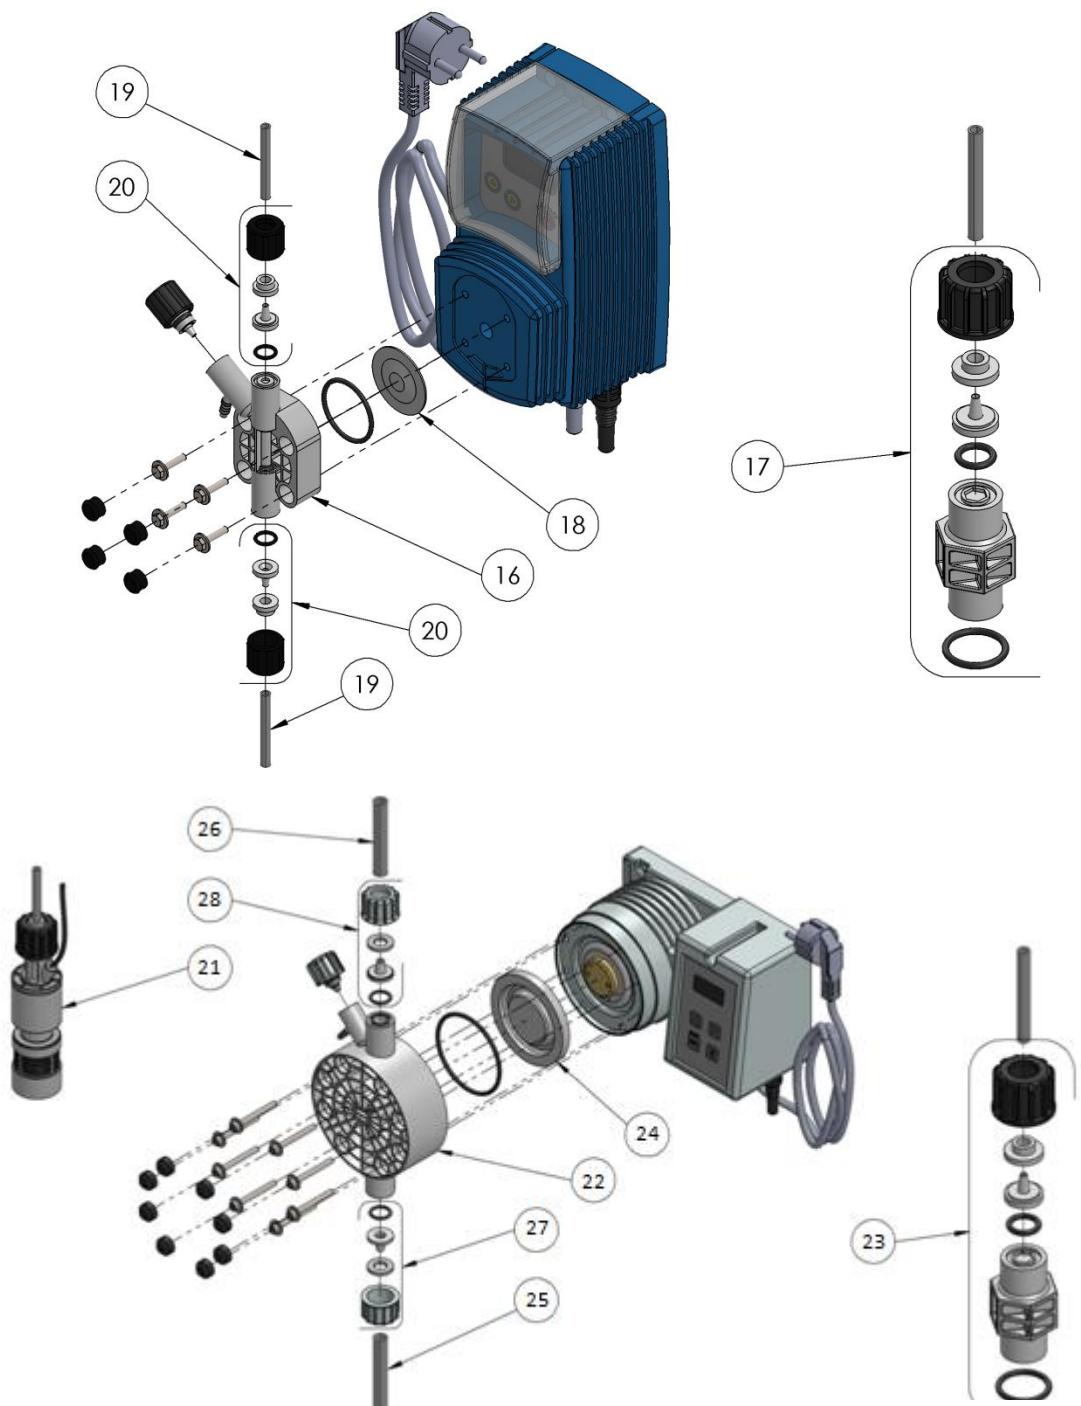


Fig. 1.1 Diagram of parts

1.2 Parts list

The parts list below relates to the diagram of parts in paragraph 1.1.

Spare parts Digi Doser Duo General 2		
Code	Artikelnummer	Beschrijving
1	8800410	Pomp Di-O-Clean 2,7 ltr/8 bar 230 V
2	8800414	Pomp General 30 ltr/3 bar 230V
3	8804085	Water meter 3/4, 2.5 m3/h
4	8800610	Signal splitter, with cable
5	8800287	Mounting plate Digi Doser
6	8800250	Ball tap, PVC, 40 mm
7	8800221	Two-part binding 40 x 1½" with gasket
8	8800258	Reducing nipple, 1½" x ¾"
9	8800244	T-piece 90°, 40 x ½" x 40
10	8800384	PVC pipe 40 mm, L=75mm
11	8800384	PVC pipe 40 mm, L=150mm
12	8800293	Hose clip 40 mm
13	8800253	Filling block 40 mm
14	8800286	Dry run guard lasp 72 cm Digi Doser
15	8804534	Di-O-Clean can adapter
16	8804514	Pump head K, Digi Doser Di-O
17	8804528	Injector Di-O-Clean, 5 bar, 1/2" 4 x 6
18	8804511	Membrane K
19	8804535	Comp/suction hose, Digi Doser Di-O, 2 m
20	8804588	Hose fit. kit Digi Doser Di-O, 3/8" 4x6
21	8804574	Dry run protection, General, 1/2" 8 x 12
22	8804585	Pump head S, Digi Doser General
23	8804580	Injector General, 1 bar, 1/2" 8 x 10
24	8804025	Diaphragm S
25	8800448	Suction hose 2 m 8 x 12 Digi Doser
26	8804596	Pressure hose Digi Doser, 2 m 8 x 10
27	8804595	Hose fitting kit Digi D. Gen. 3/4" 8x12
28	8804592	Hose fit. kit Digi D. General, 3/4" 8x10
-	8804599	Fuse 1 A

Fig. 1.2 Parts list

1.3 Articles included

- Digi Doser mounting plate
- Digi Doser water pipework
 - 3 x Pipe clamps
 - 3 x spacer blocks
 - Manometer, including T-piece
 - 4 x threaded bolts Ø 8 x 60 mm
 - 4 x plugs bolts Ø 8 x 10 mm
 - 1 x 50 cc Syringe
- Di-O-Clean pump (blue)
 - Suction hose
 - Pressure hose
 - Injector
 - 2 x screws
 - Fuse
- General Pump
 - Suction hose
 - Dry-run protection
 - Pressure hose
 - Injector
 - 2 x screws
 - Fuse
- Dry-run protection LASP 72 cm
- Signal splitter, with cable
- Digi Doser instruction card

Optional:

- Pressure regulator with manometer
- Water filter set

2. INSTALLATION INSTRUCTIONS

2.1 Preparation

We advise you to fit a bypass (fig. 2.1.) around the pump's location. In this way, you can continue to use the main pipeline and easily maintain a water supply to your animals during maintenance or in case of any fault.

For proper dosing, the pump must be calibrated according to the water pressure. That is why there must always be a manometer installed in front of the Digi Doser.

A supply of clean water and the proper pressure are prerequisites for proper dosing system function. If the water supply is not optimal, you can install an additional water filter and/or pressure regulator (see Fig. 2.1):

1. Water filter (4309554)
2. Pressure regulator (8804050) / Manometer

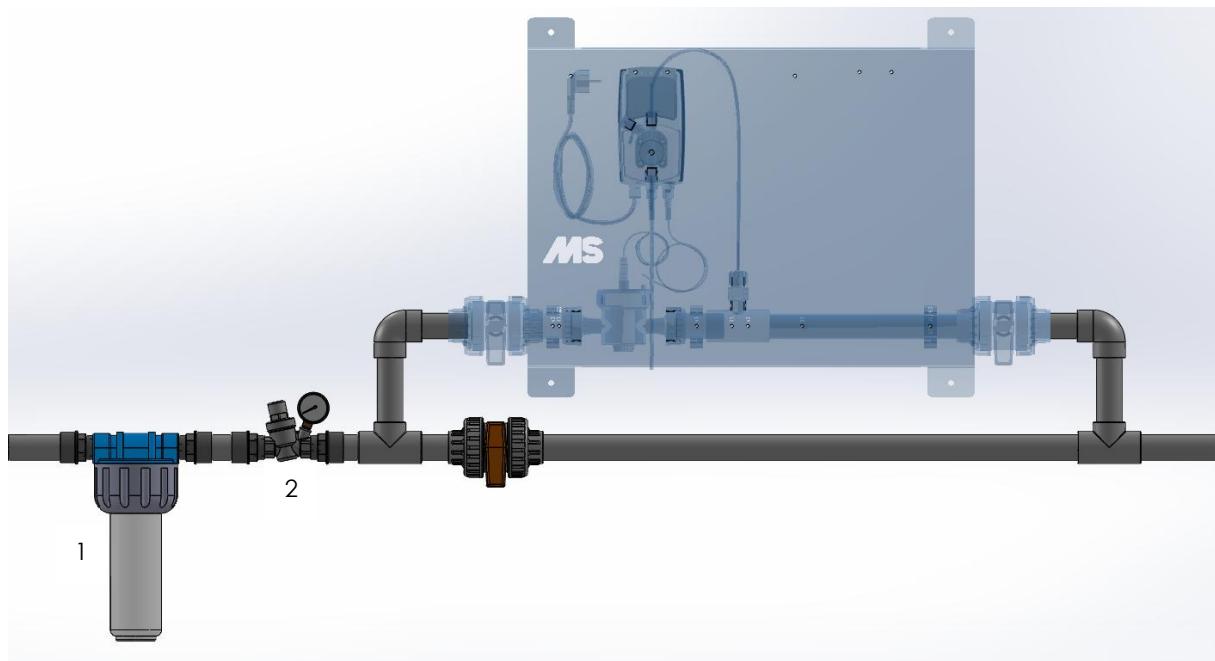


Fig. 2.1. Diagram of the bypass


2.2 Mounting the water supply and dosing pumps

Click the 3 pipe clamps onto the spacer blocks and mount them, using the provided screws into holes number 7, 11 and 13.

The DI-O-Clean pump (blue) must be mounted using holes 2 and 3.

The General pump (gray) must be mounted using holes 4 and 6.

Then click the water pipe into the pipe clamps.

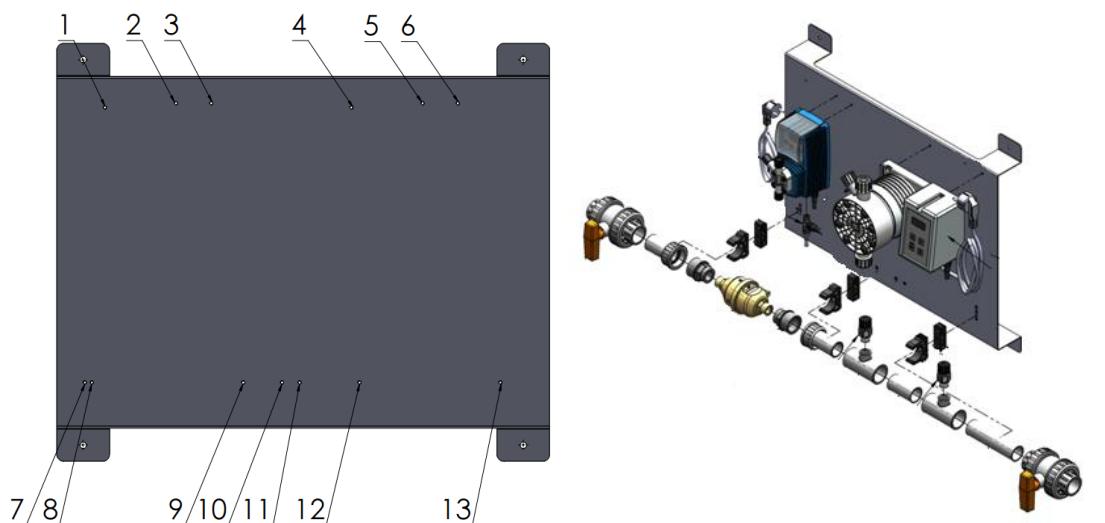

- Bring on 11 layers of teflon tape on the injector of the DI-O-Clean pump (blue) and screw it into T-part 1.
- Remove the plug from T-part 2.
- Bring on 11 layers of teflon tape on the injector of the General pump (gray) and screw it into T-part 2.



2.3 Fitting the device

Turn off the water supply and cut away the supply pipeline. Fit the necessary fittings for connecting the pump.

- Mark the four mounting holes (level) on the wall behind.
- Drill four holes (\varnothing 10 mm) in the wall where you are mounting the device.
- Mount the device on the wall, using the supplied plugs and bolts.
- Connect the water supply to the inlet and the outlet pipe (for treated water) to the outlet. Open the ball valves at the pump inlet and outlet (Figure 1).

2.2.1 Digi Doser Di-O

- Screw the signal splitter into the "input" on the bottom of the pump. Connect the cable from the water meter to the signal splitter. (Figure 2)
- Connect the dry-run protection cable to the "level" connector on the dosing pump (Figure 2).
- Connect the suction hose with the dry-run protection to the underside of the pump (Figure 3).
- In the same way, connect the pressure hose to the topside of the pump and to the injector (Figure 4).

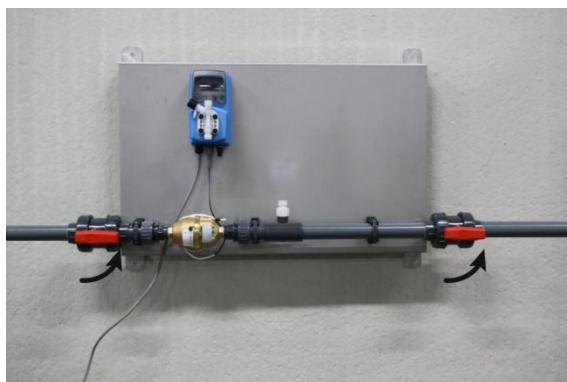


Figure 1: Open the ball valves

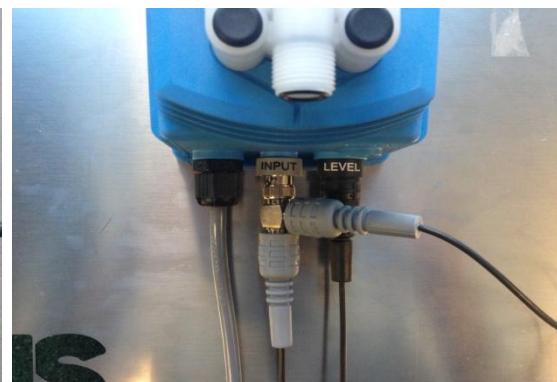


Figure 2: Connecting the dry-run protection and water meter.



Figure 3: Connecting the suction hose

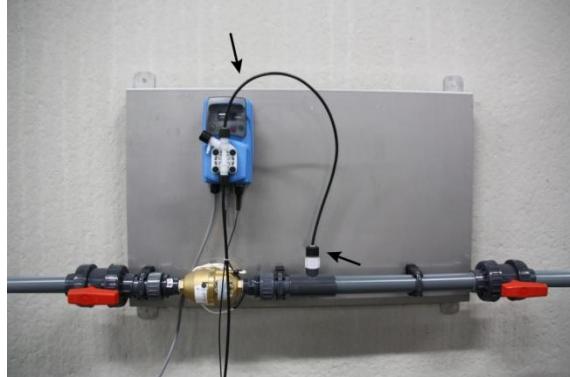


Figure 4: Connecting the pressure hose

2.2.2 Digi Doser General

- Connect the cable of the signal splitter to the "input" of the General pump (Figure 5).
- Connect the dry-run protection cable to the "level" connector on the dosing pump (Figure 6).
- Connect the suction hose with the dry-run protection to the underside of the pump (Figure 7).
- In the same way, connect the pressure hose to the topside of the pump and to the injector (Figure 8).

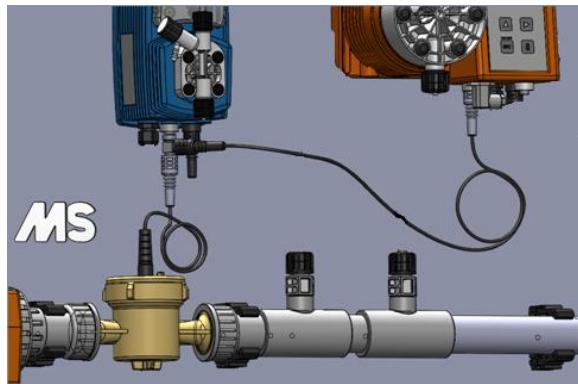


Figure 5: Connecting water meter



Figure 6: Connecting the dry-run protection

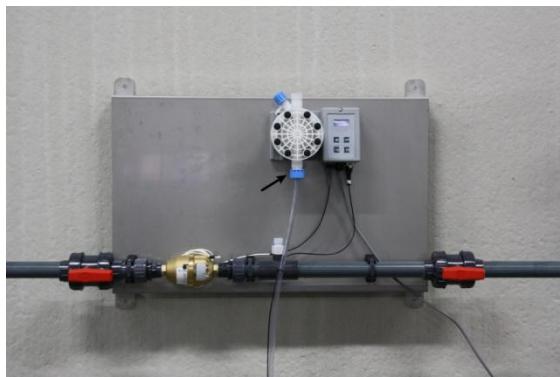


Figure 7: Connecting the suction hose

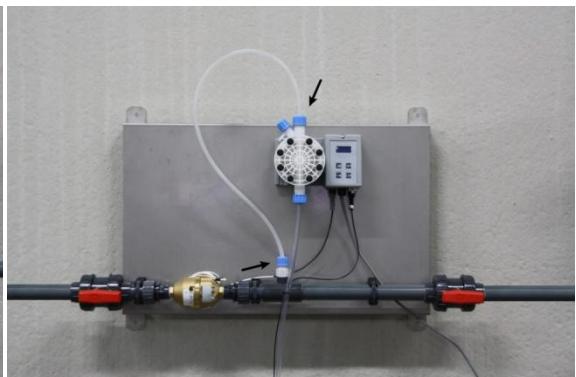


Figure 8: Connecting the pressure hose

3. SETTING THE DEVICE INTO OPERATION

3.1 Venting and starting the device

3.1.1 Digi Doser Di-O

- Switch the pump on (Figure 9) and set the correct dosage (see paragraph 4.1.1.).
- Place the container of Di-O-Clean under the device.
- Connect the suction lance to the container, using the supplied adapter (Figure 10).
- Connect the supplied syringe with the appropriate hose to the vent valve. Open the venting valve on the pump head and use the supplied syringe and tube to suck the air from the system until fluid runs into the syringe (Figure 11).
- Close the venting valve again.
- Press and hold down the right arrow button for 5 seconds. The system will then dispense for 30 seconds, so that the whole system fills with Di-O-Clean (Figure 12).
- The system is ready for use.



Figure 9: Switching the pump on



Figure 10: Connecting the suction lance to the

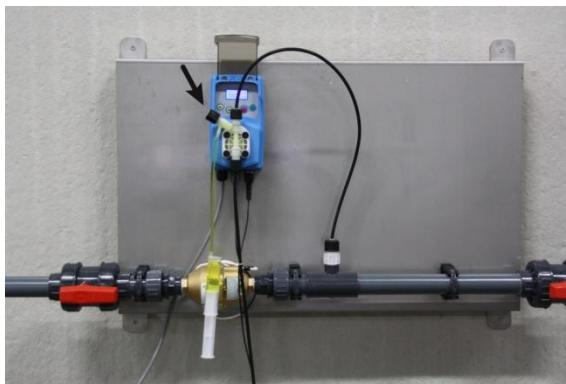


Figure 11: Venting the pump



Figure 12: Filling the pressure hose

3.1.2 Digi Doser General

- Switch the pump on (Figure 13) and set the correct dosage (see paragraph 4.1.2.).
- Place the product container under the device.
- Suspend the suction hose with the dry-run protection in the liquid (Figure 14).
- Connect the supplied syringe with the appropriate hose to the vent valve. Open the venting valve on the pump head and use the supplied syringe and tube to suck the air from the system until fluid runs into the syringe (Figure 15).
- Close the venting valve again.
- Press and hold down the right arrow button for 5 seconds. The system will then dispense for 30 seconds, so that the whole system fills with the product (Figure 16).
- The system is ready for use.



Figure 13: Switching the pump on



Figure 14: Put the suction hose in the liquid

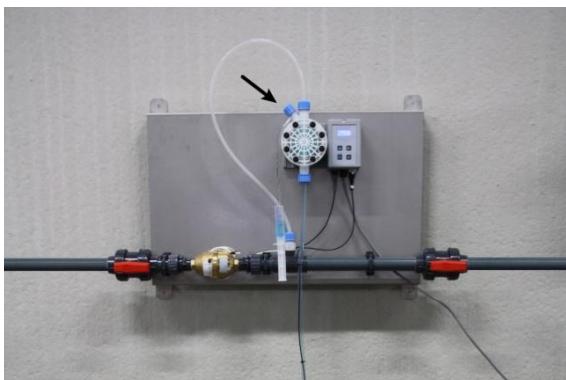


Figure 15: Venting the pump



Figure 16: Filling the pressure hose

3.2 Technical data for the pump

Specification	Digi Doser Di-O 2 (blue)	Digi Doser General 2 (gray)
Max pressure	8 bar	3 bar
Minimum Flow rate		15 litres per hour
Nominal flow rate		2,500 litres per hour
Maximum flow rate		3,000 litres per hour
Maximum injections per minute	180	120
Injections per impulse	0.25 cc at 5 bar	4.20 cc at 3 bar
Pump output	2.7 litres per hour at 5 bar	30 litres per hour at 3 bar
Working temperature	from 0 to 45 °C	from 0 to 45 °C
Voltage	230 VAC	230 VAC
Power use	16 W	27 W
Dimension mm	942 mm x (H) 500 mm x (D) 237 mm	
Weight		± 15 kg
Protection rating		IP 65
In/output connections		40 mm PVC

4. SETTINGS

The following settings are pre-set in your dosage pump:

Settings	Digi Doser Di-O 2 (blue)	Digi Doser General 2 (gray)
CC per impulse (CC/ST)	0.25	4.20
TEST	100 impulses	50 impulses
Reserve in supply tank (LEVEL)	02.000 litres	02.000 litres
Water meter pulses (WMETER)	002 per litre	002 per litre
Unit (UNIT)	litre	litre
Password (PASSWORD)	0000	0000
MODE (4)	PPM	PERC
Dosage	PPM	00.20%
CONC%	100	100
Upkeep	NO	N/A

Diagram 1

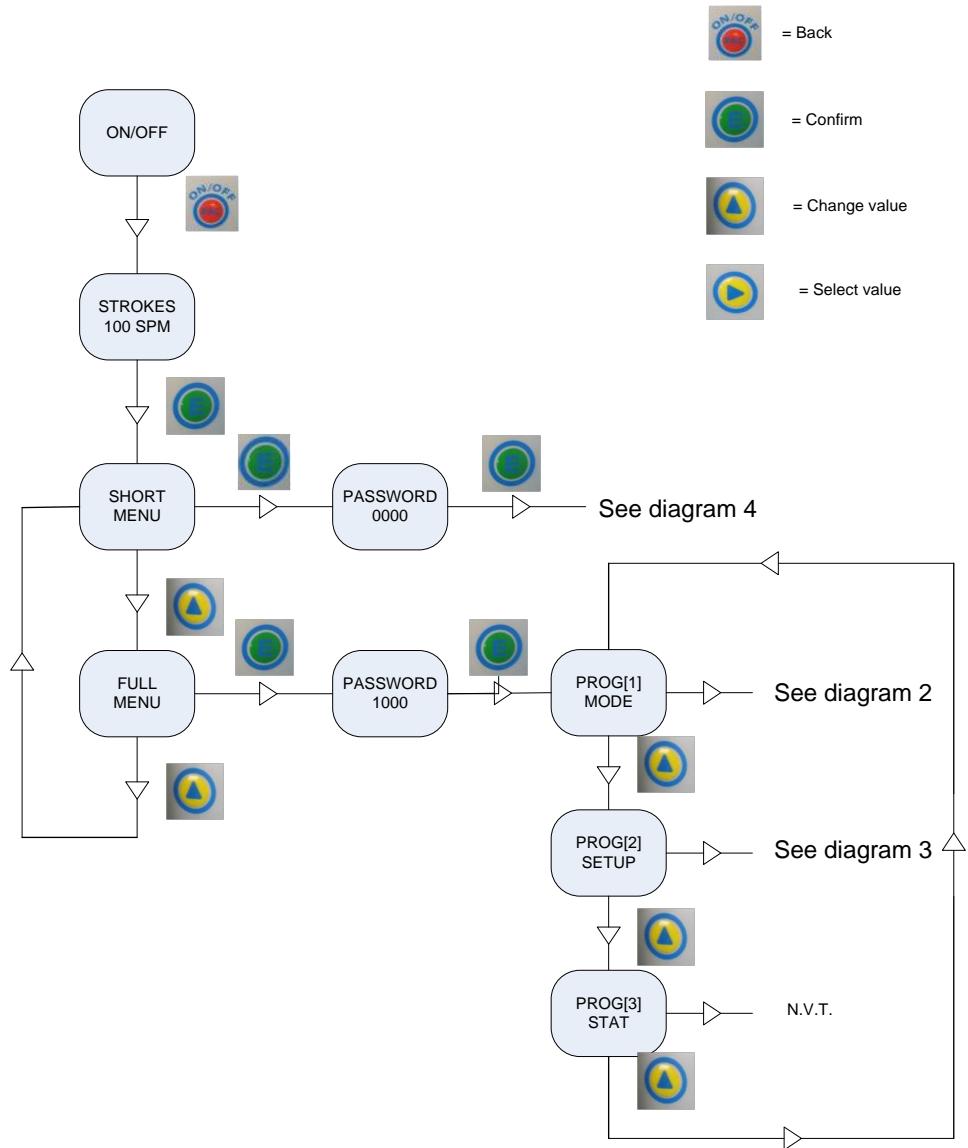


Diagram 2


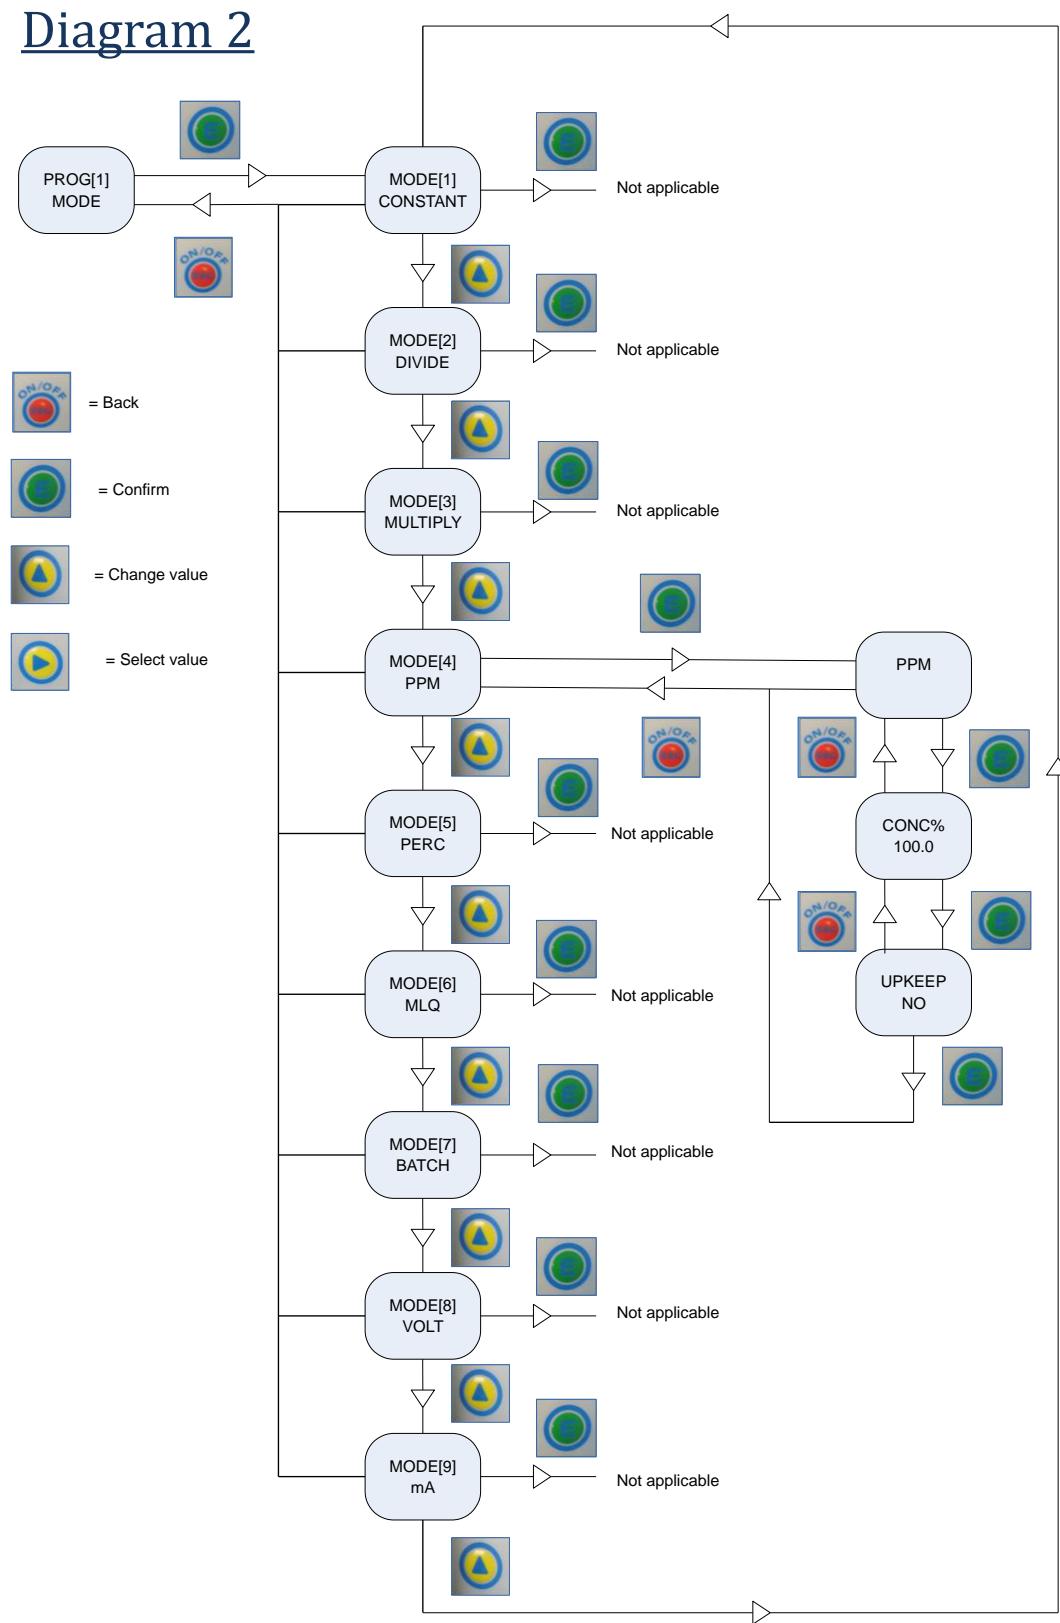



Diagram 3

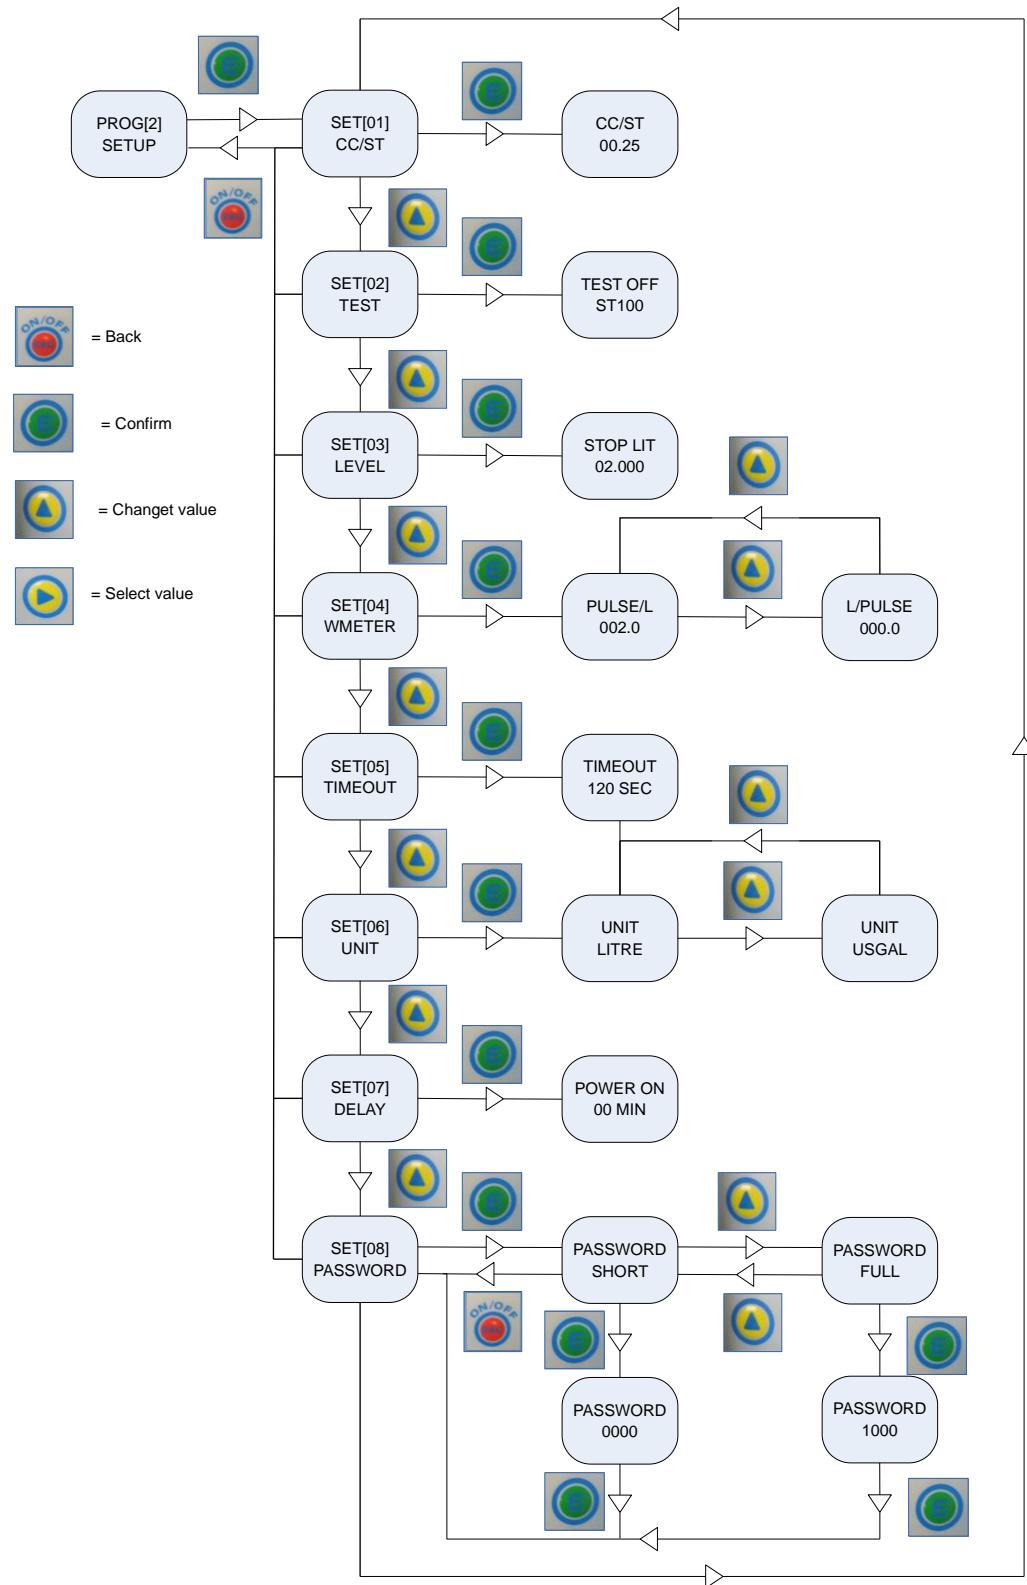

4.2 Modifying dosage

Follow the steps below to modify dosage:

Diagram 4

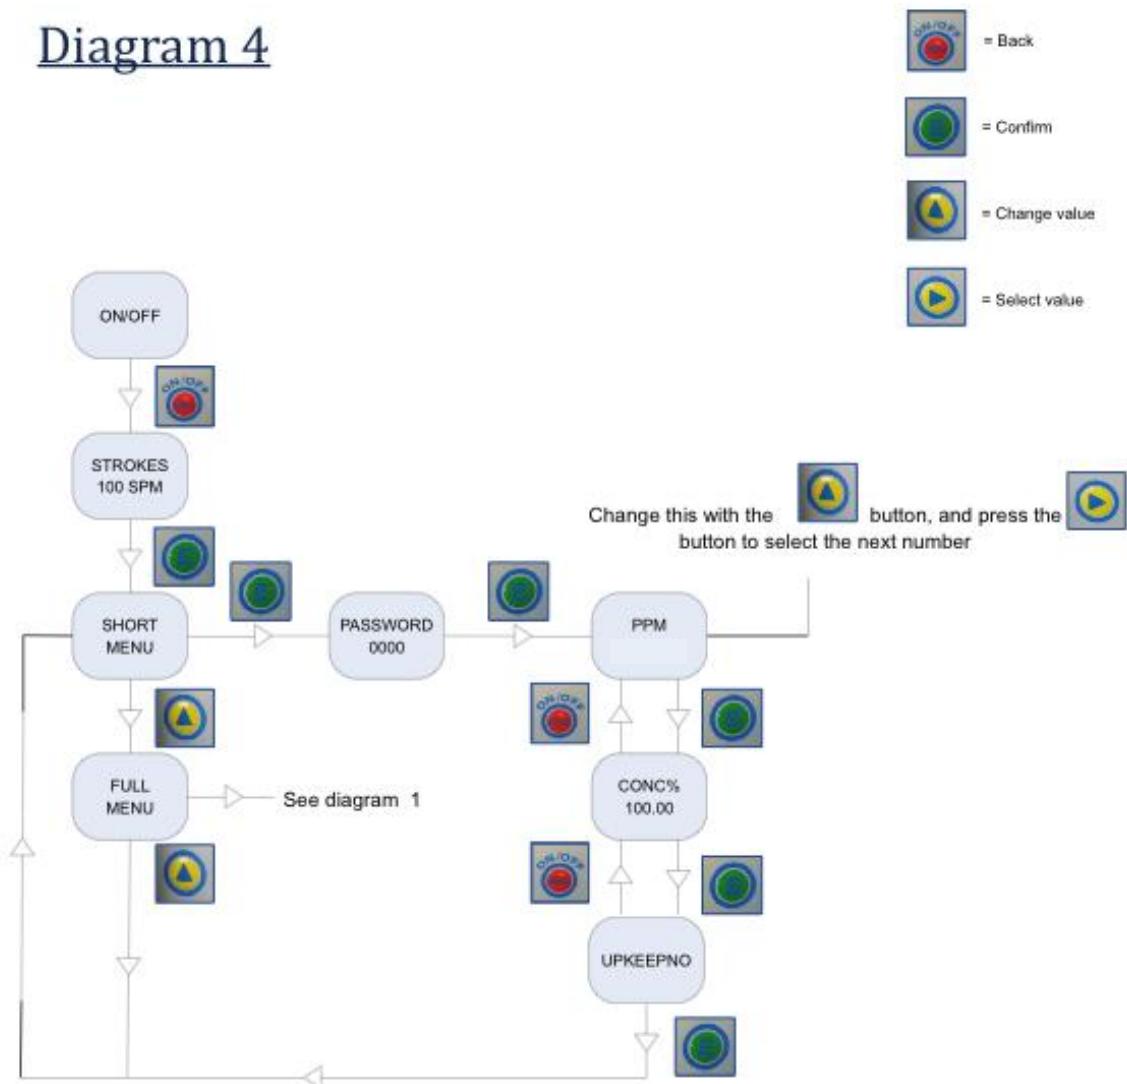

After modification, and when you are back in the short menu, press the ESC button twice to go back.

Diagram 1

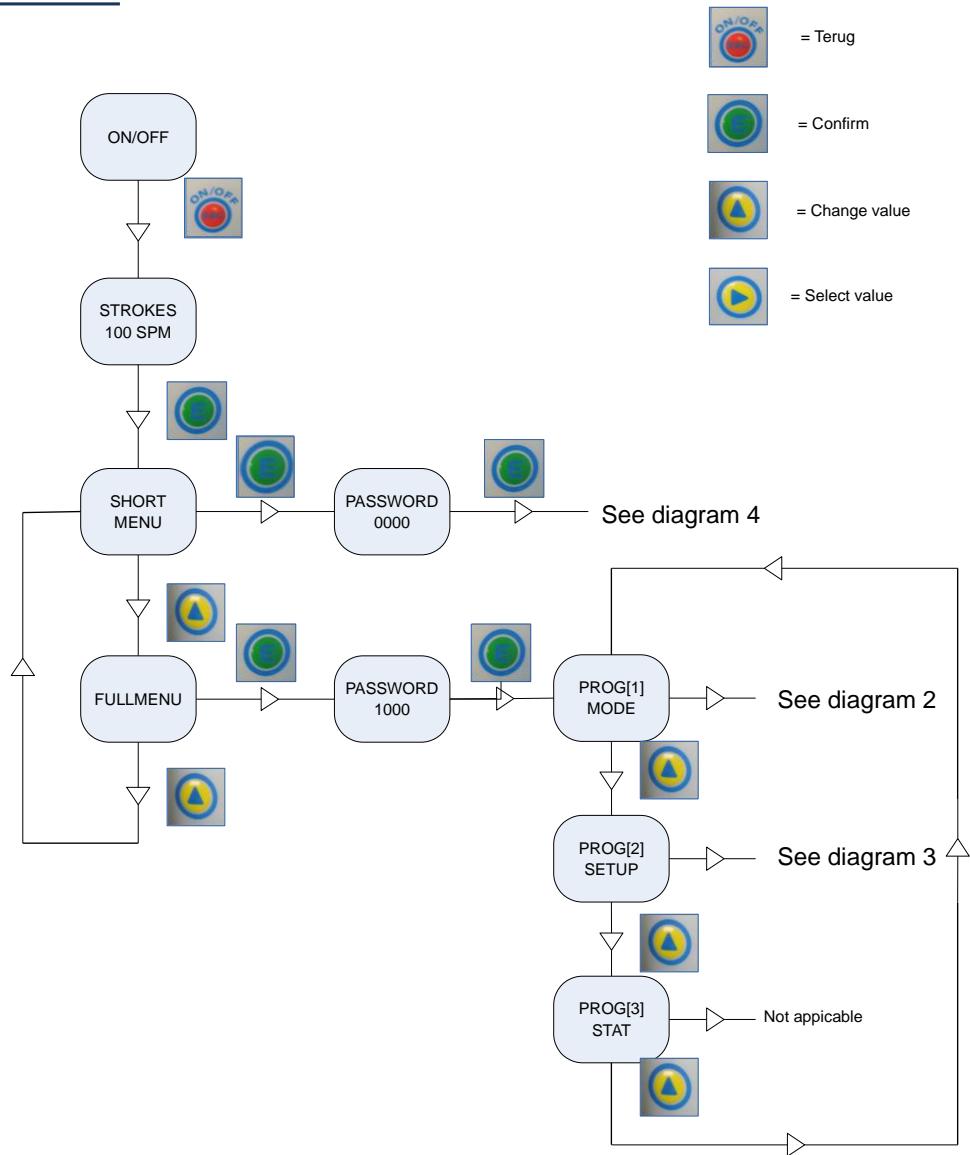


Diagram 2


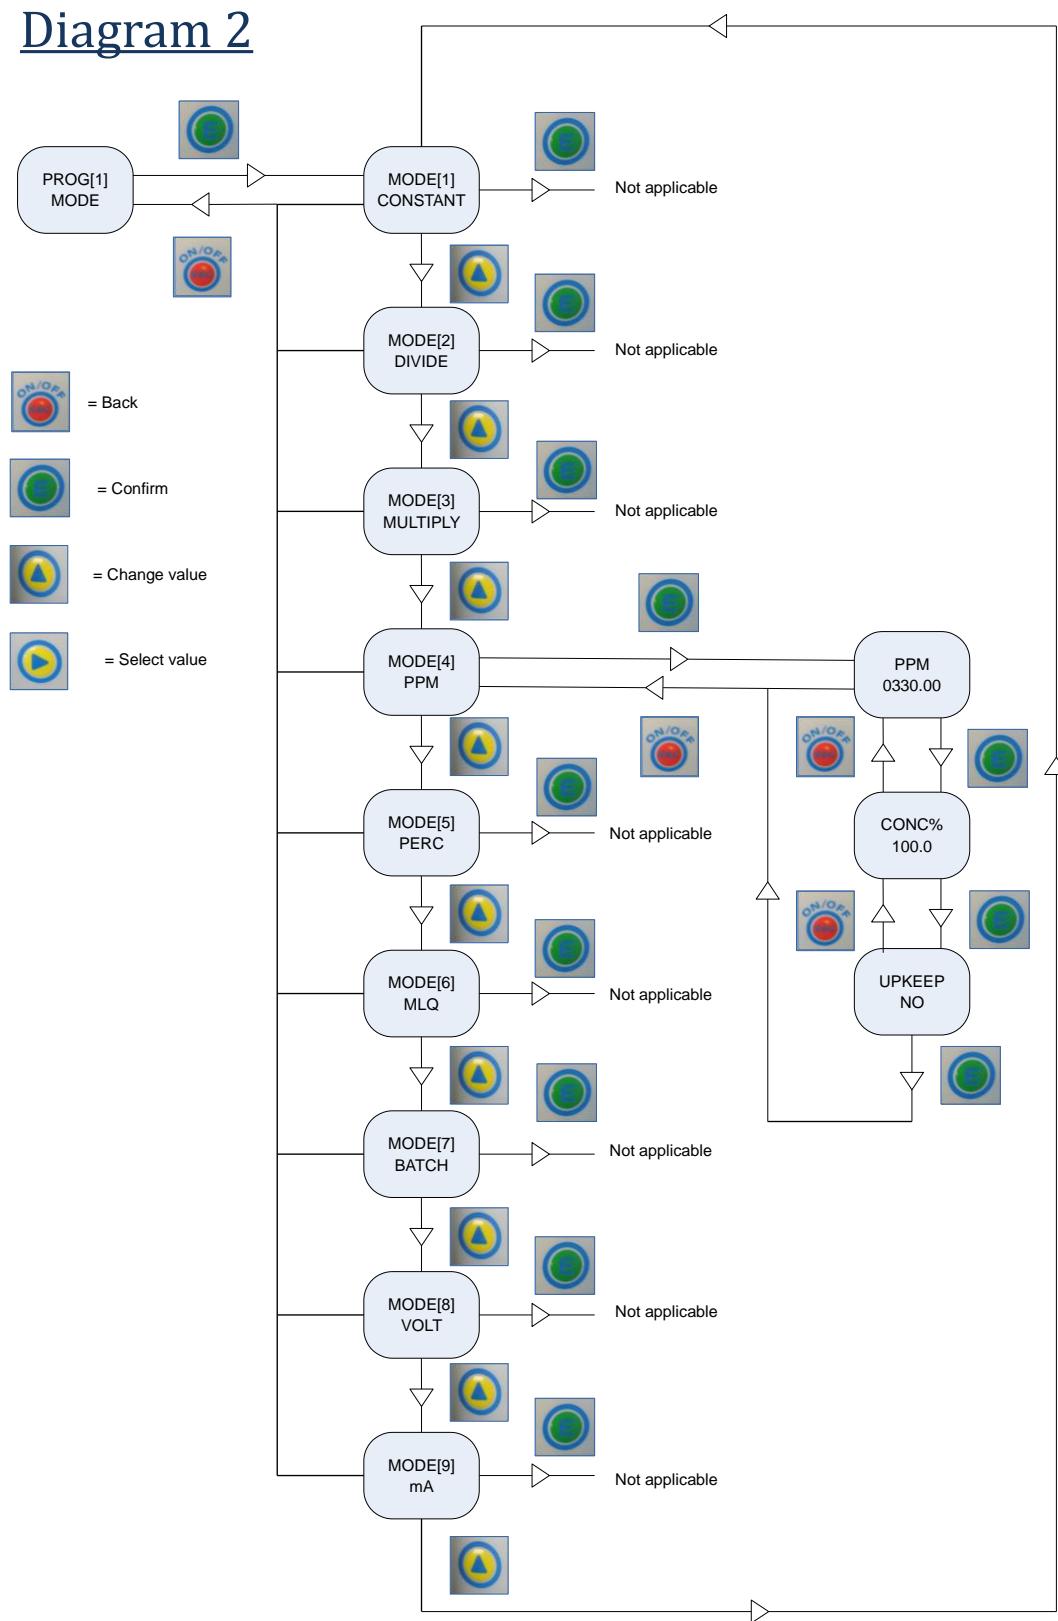



Diagram 3

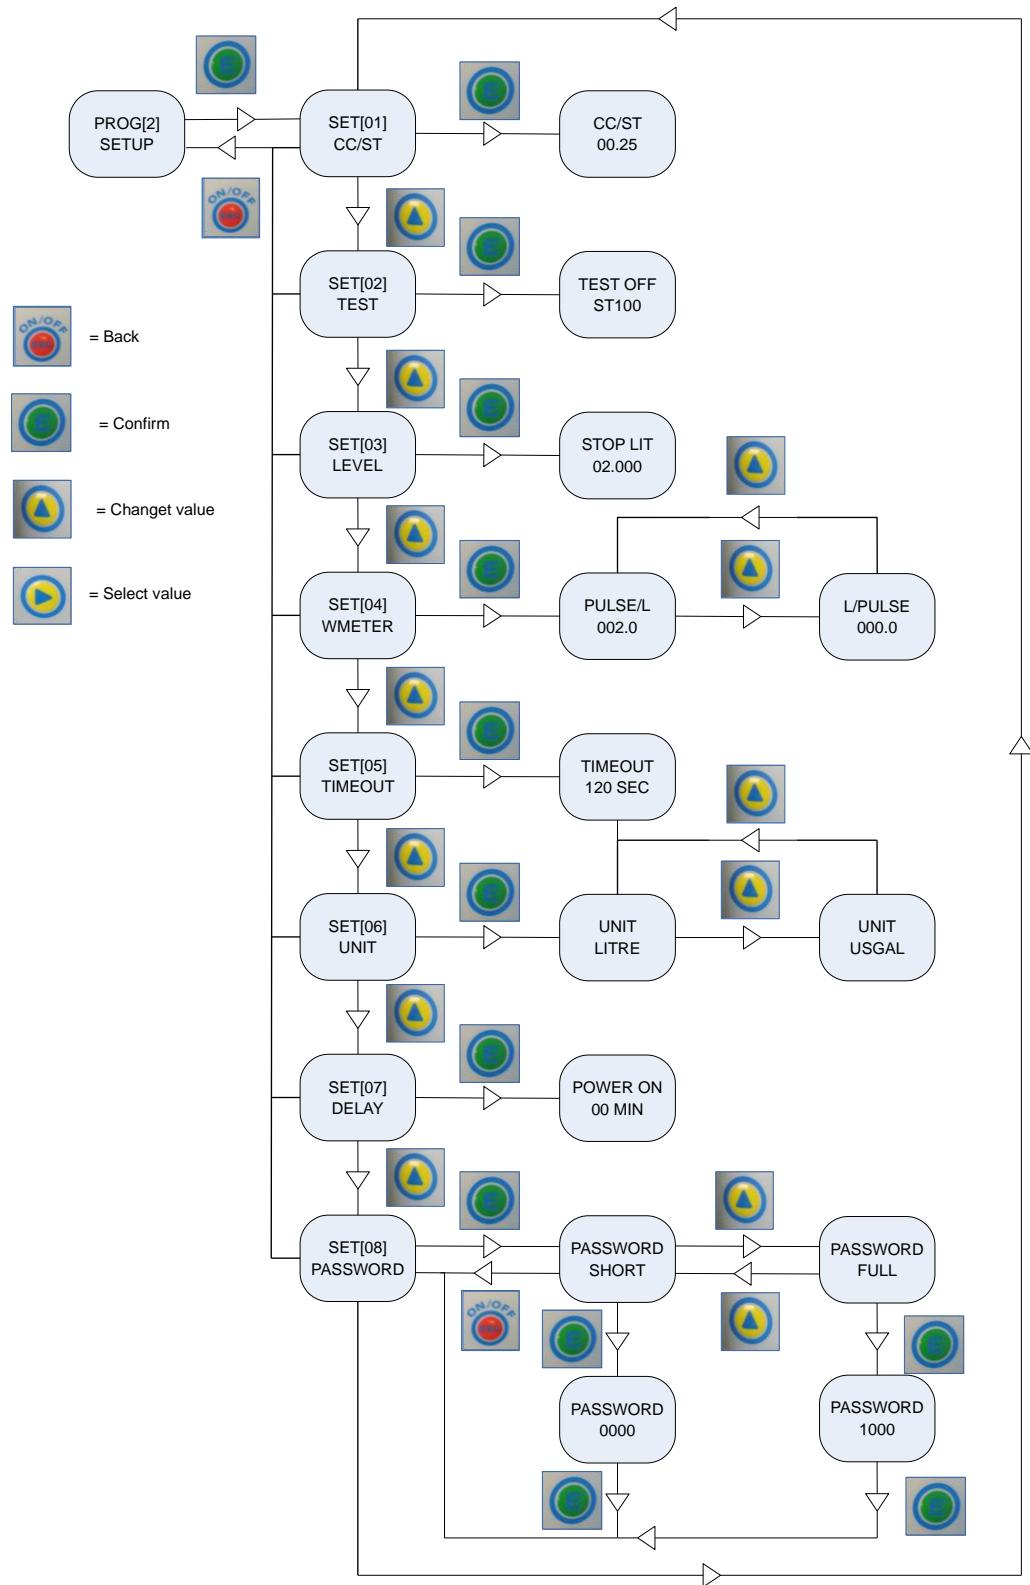

4.2 Modifying dosage

Follow the steps below to modify dosage:

Diagram 4

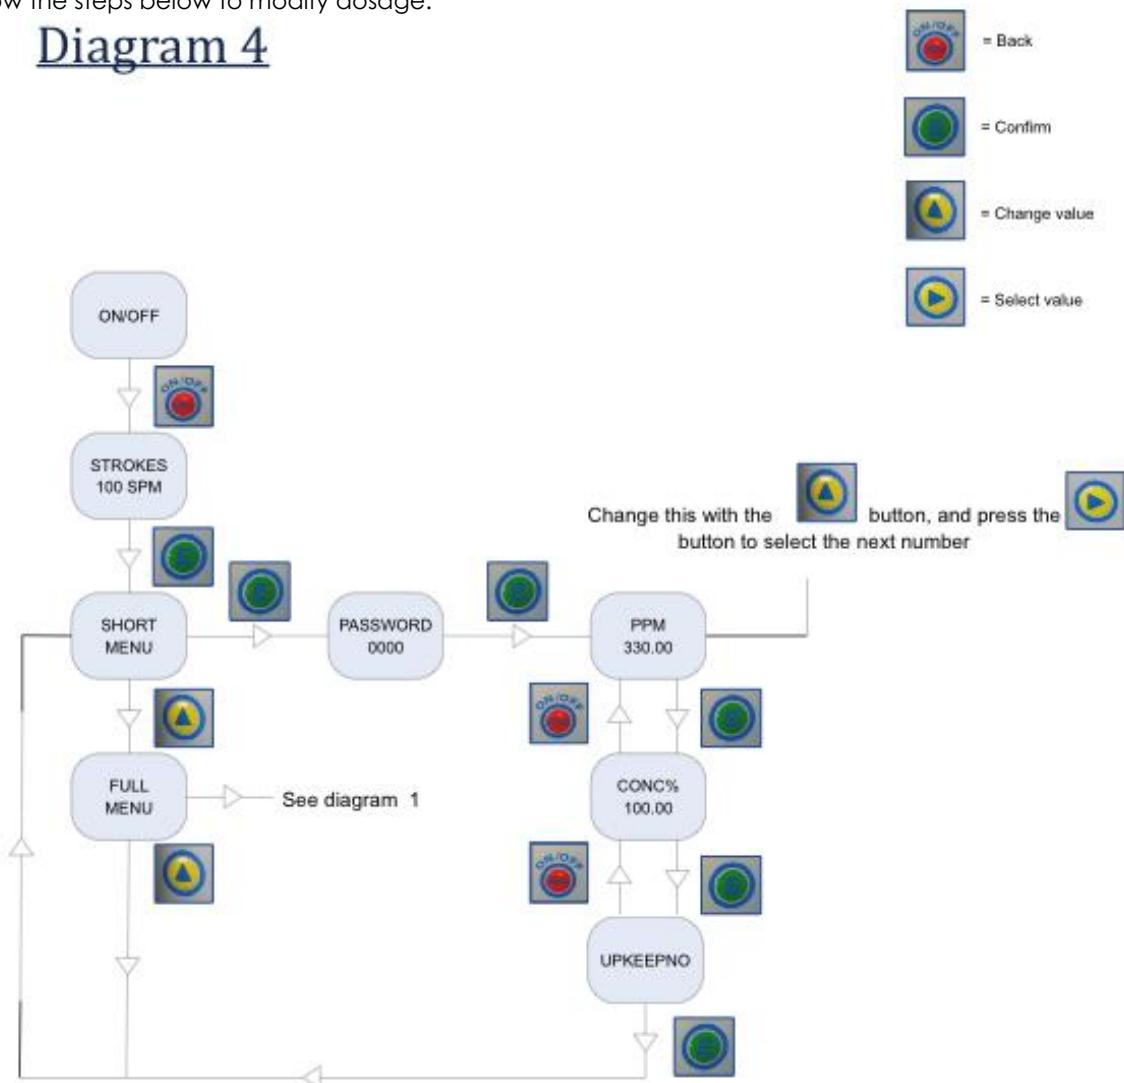

After modification, and when you are back in the short menu, press the ESC button twice to go back.

5. MAINTENANCE

5.1 Cleaning the pump

When the pump has been idle for an extended period, we advise flushing the device with a few litres of clean water.

6. TROUBLE SHOOTING

PROBLEM	CAUSE	SOLUTION
Fault handling	General	Press  until "alarm" shows in the display. Then press  to see notification of the fault in question.
Dosage is not accurate	Wrong setting	Check the percentage or PPM, concentration and number of water meter pulses
	Excessive pressure	Set the pressure to Max. 5 bar while water is released by the pressure reducing valve
	Foot filter blocked or defective	Clean or replace the foot filter
	Pump head valves, foot filter or injector blocked or damaged.	Replace or clean the defective or dirty parts
	Electromagnet not delivering sufficient power (dull sound)	Send the pump to the repair service
Dosage too high	Injector Wrong injector mounted Defective injector	Check the injector (number 5 on the injector)
Product/water drains back into the supply tank	Defective/dirty injector or valve	Replace/clean the injector and/or the valves
	Checking the injector	Screw the pressure hose off, and if water leaks from the injector, replace it Or Screw the pressure hose off. Let the pump dose. Seal the pressure hose with your thumb. If the injector remains blocked with enough pressure, → replace it.
The water meter is running and no product is dosed	Carry out the following test: Disconnect the water meter cable from the pump and connect the dry-run protection cable to it. Take the foot valve out of the supply tank and move the float up and down.	The pump should now inject with the movements of the float. If it does not, you should send the pump in for repair. If it does work, you need to replace the water meter's sensor, cable or the whole meter.

PROBLEM	CAUSE	SOLUTION
Strange symbols show on the display or certain pump functions are no longer accessible through the buttons	Fault on the printed circuit	Reset. Switch off the pump with the "ESC" button. Take the plug out of the power outlet. Press both arrow buttons and hold them down while reconnecting the power plug. The screen shows "load default" Reprogram the pump. If this does not succeed, you should send the pump in for repair.
Display/pump does not work	Power supply interrupted	Check the power supply
	Faulty fuse	Screw off the cover on the back of the pump and check/replace the fuse. If the problem recurs, send the pump in for repair
	Defective printed circuit	Send the pump to the repair service
Alarm "low level in the tank" # flashing (→alarm 1 level)	To pump the tank completely empty, a certain number of reserve litres are programmed. The pump keeps on working until this reserve is gone.	Possibly modify the reserve setting for the supply tank.
Pump doses continuously	Press  and read the mode from the display	Check the settings % PPM Continuous Impulse/litre (not litre/impulse)

