


# OPEN TOP PREMIUM DUO



Art. Nr. 080060

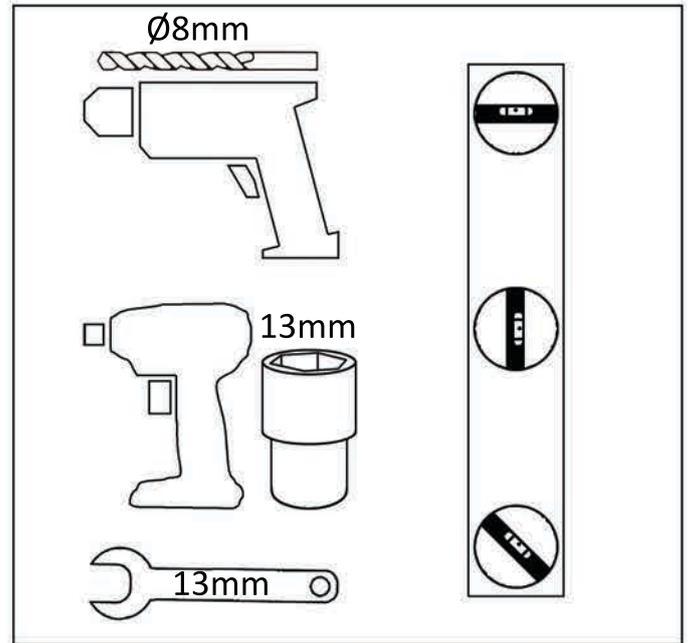


© Rights reserved by VDK Products B.V. WWW.CALFOTEL.COM 04-2020

A	M8x20 30x	G	1x	N	6x
B	M8x20 16x	H	1x	P	4x
C	M8x90 12x	J	2x	Q	4x
D	16x	K	2x	R	3x
E	68x	L	2x	S	1x
F	M8x50 12x	M	2x	T	2x

U	2x
V	2x
W	1x
X	1x
Y	1x
Z	1x
AA	1x

Art. Nr. 080060 - Ø125mm	
BB	1x
CC	8x

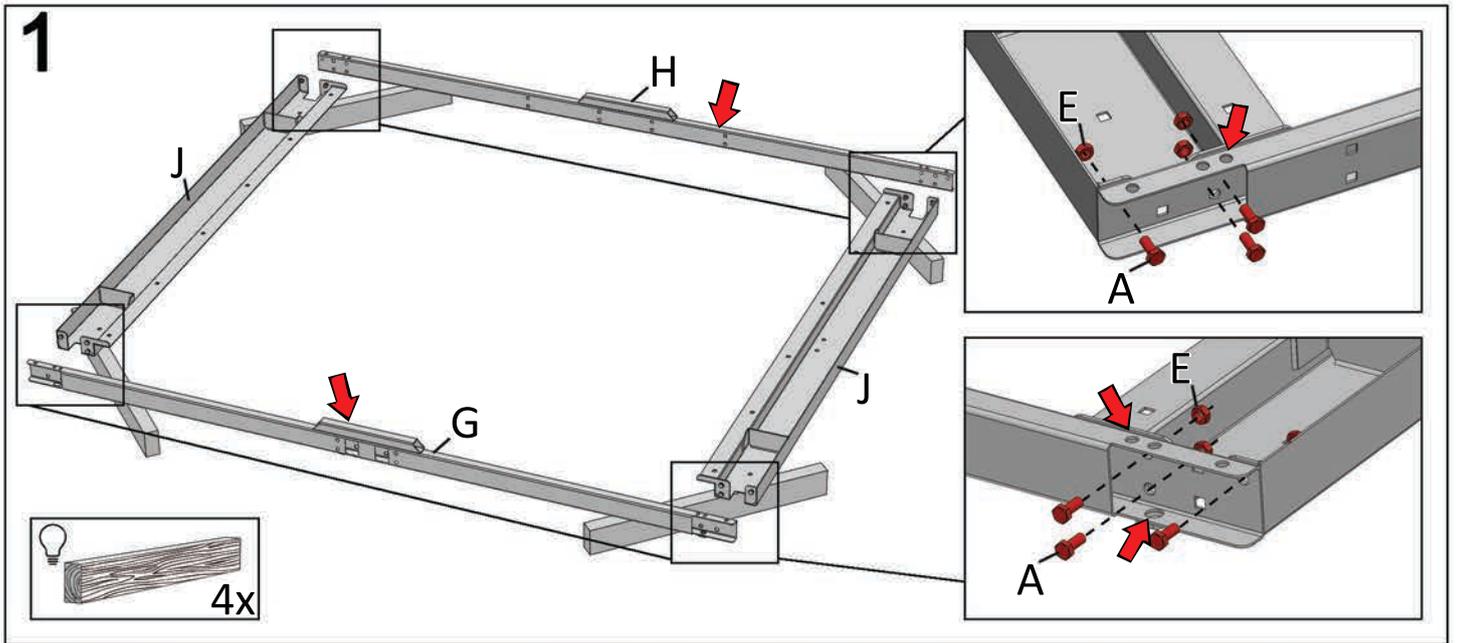


Art. Nr. 080060


**CALFOTEL**  
www.calfotel.com

© Rights reserved by VDK Products B.V. WWW.CALFOTEL.COM

04-2020

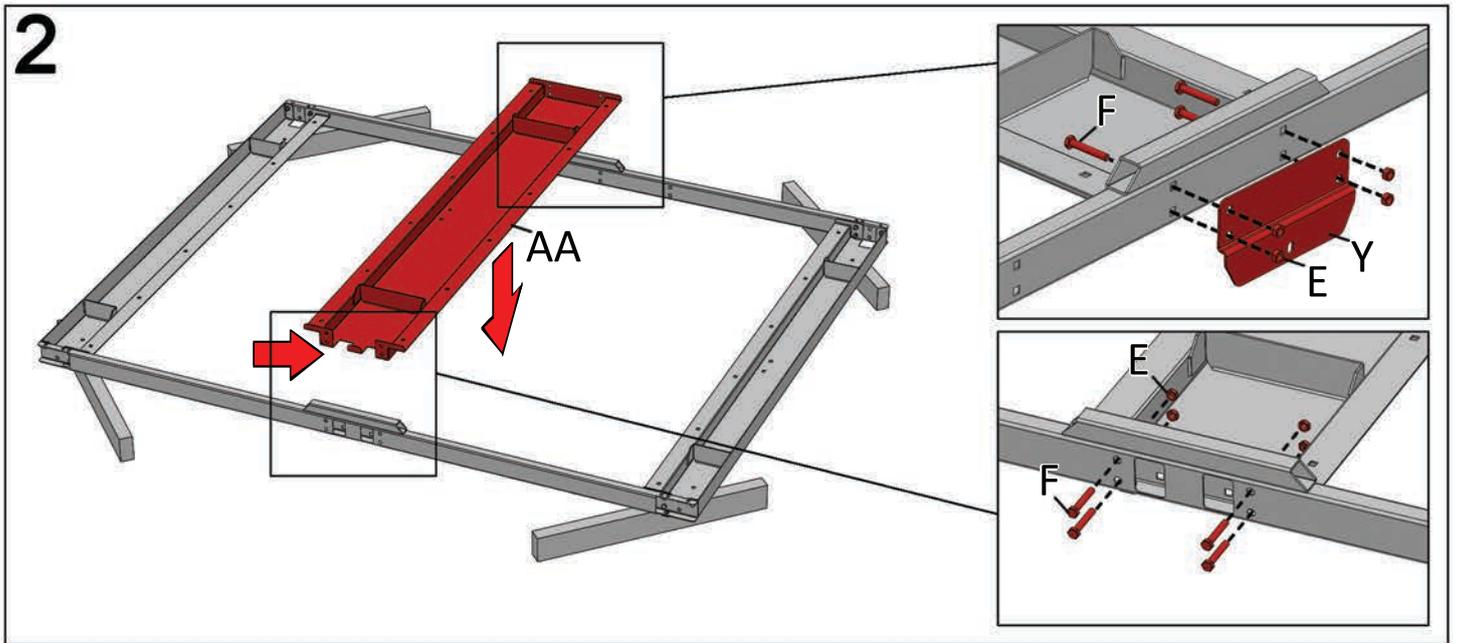

3

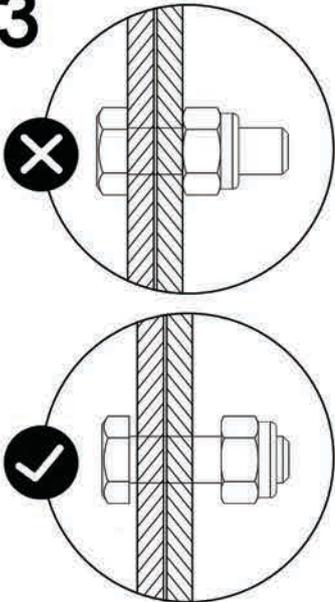


ENG. Assemble nut by hand, do not fully tighten.

NL. Monteer de moer met de hand, niet geheel vast draaien.

FR. seulement assembler l'écrou à la main, ne pas serrer complètement.

DU. Montieren Sie die Mutter nur von Hand, ziehen Sie sie nicht vollständig.


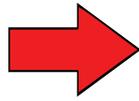


Art. Nr. 080060




© Rights reserved by VDK Products B.V. WWW.CALFOTEL.COM 04-2020



4

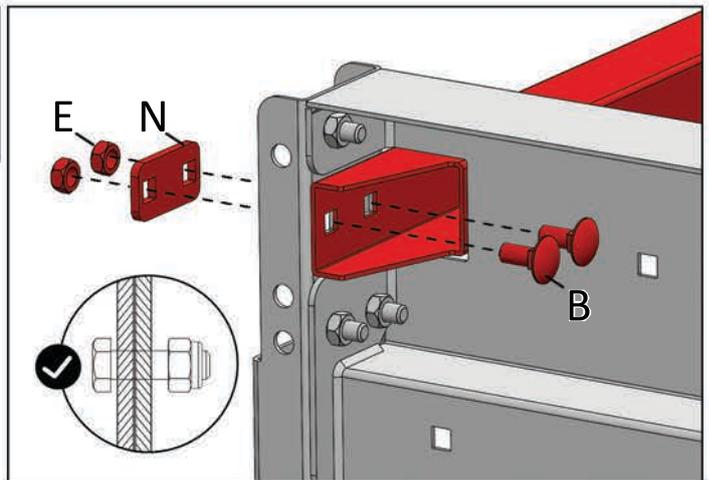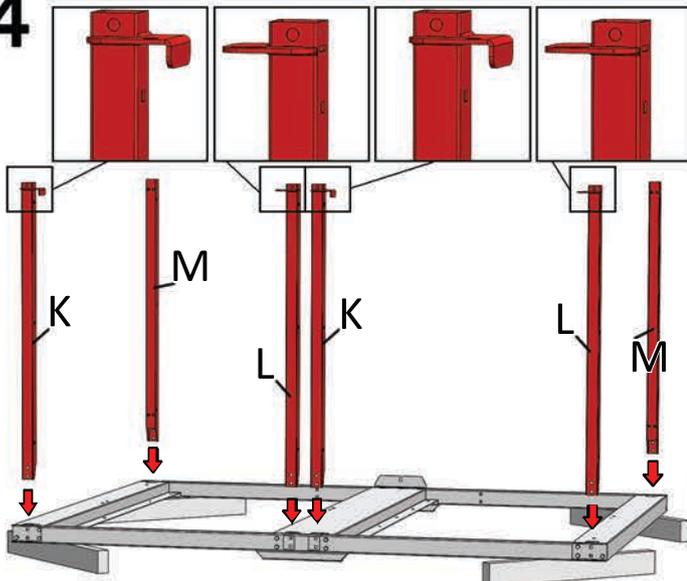

5

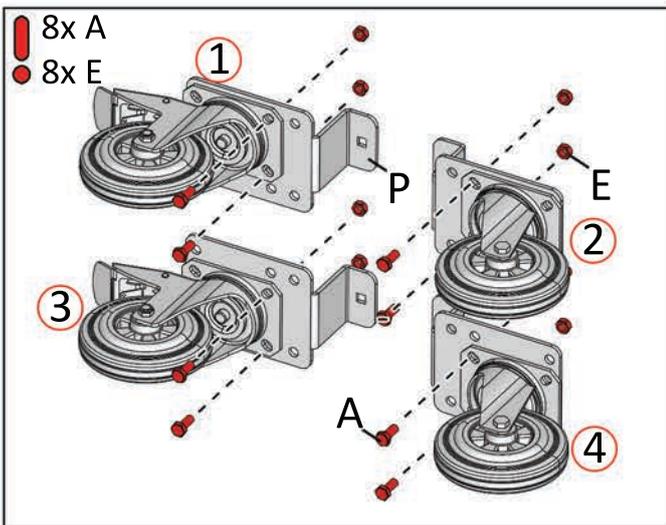




6 + Art. Nr. 080060 - Ø125m

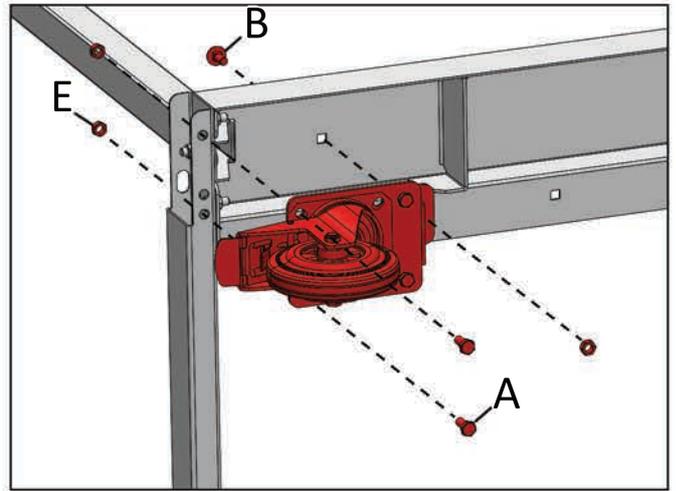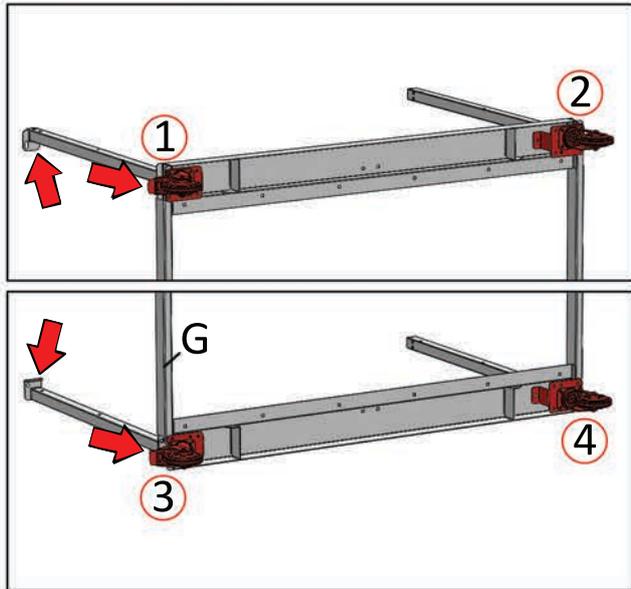

Art. Nr. 080060

**CALFOTEL**  
www.calfotel.com

© Rights reserved by VDK Products B.V. WWW.CALFOTEL.COM 04-2020

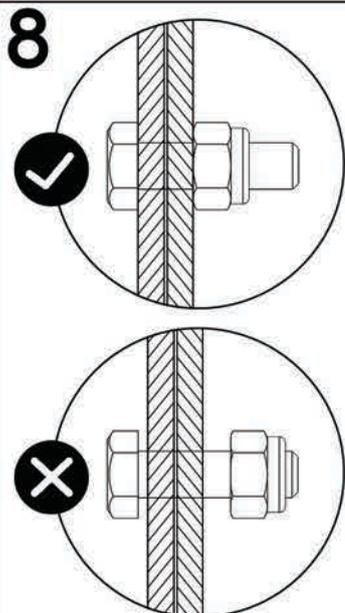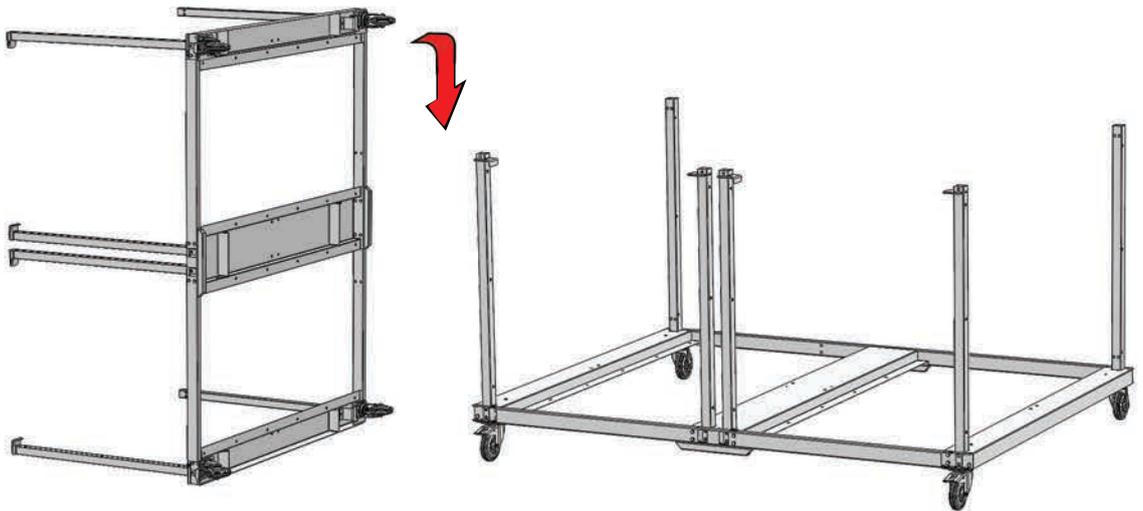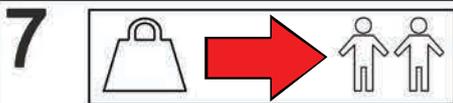


ENG. Now tighten the loose bolts.

NL. Draai nu alle losse bouten/moeren aan.

FR. Serrez maintenant les boulons desserrés.

DU. Ziehen Sie jetzt die losen Bolzen fest.

9

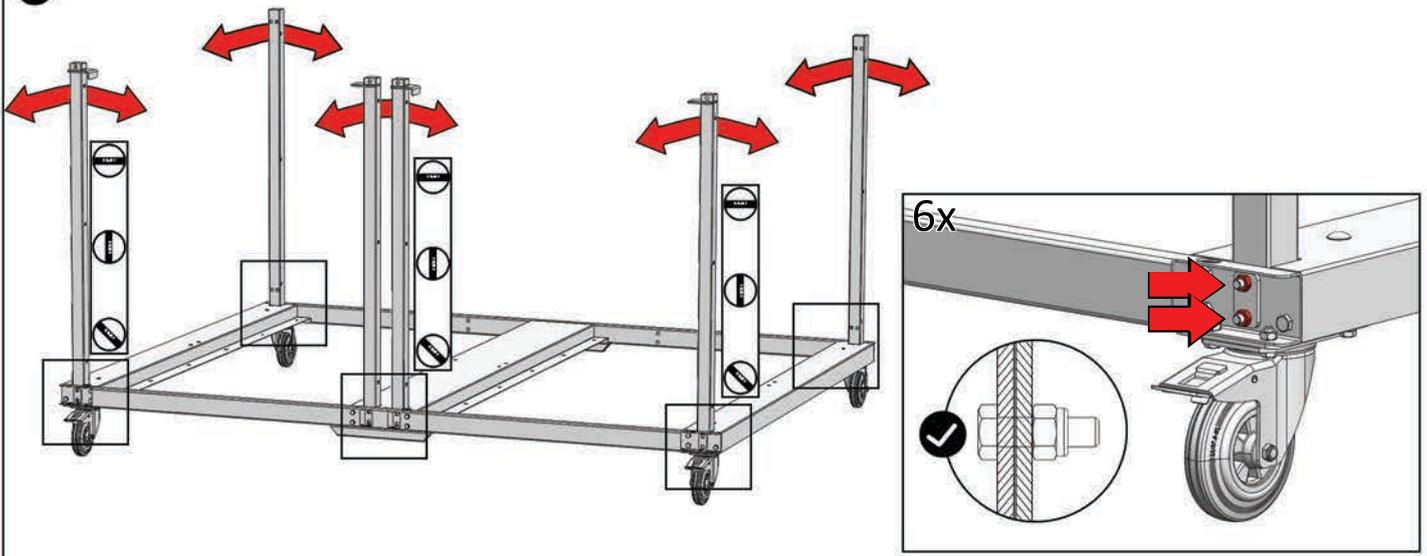


Art. Nr. 080060


**CALFOTEL**  
www.calfotel.com

© Rights reserved by VDK Products B.V. WWW.CALFOTEL.COM 04-2020


10

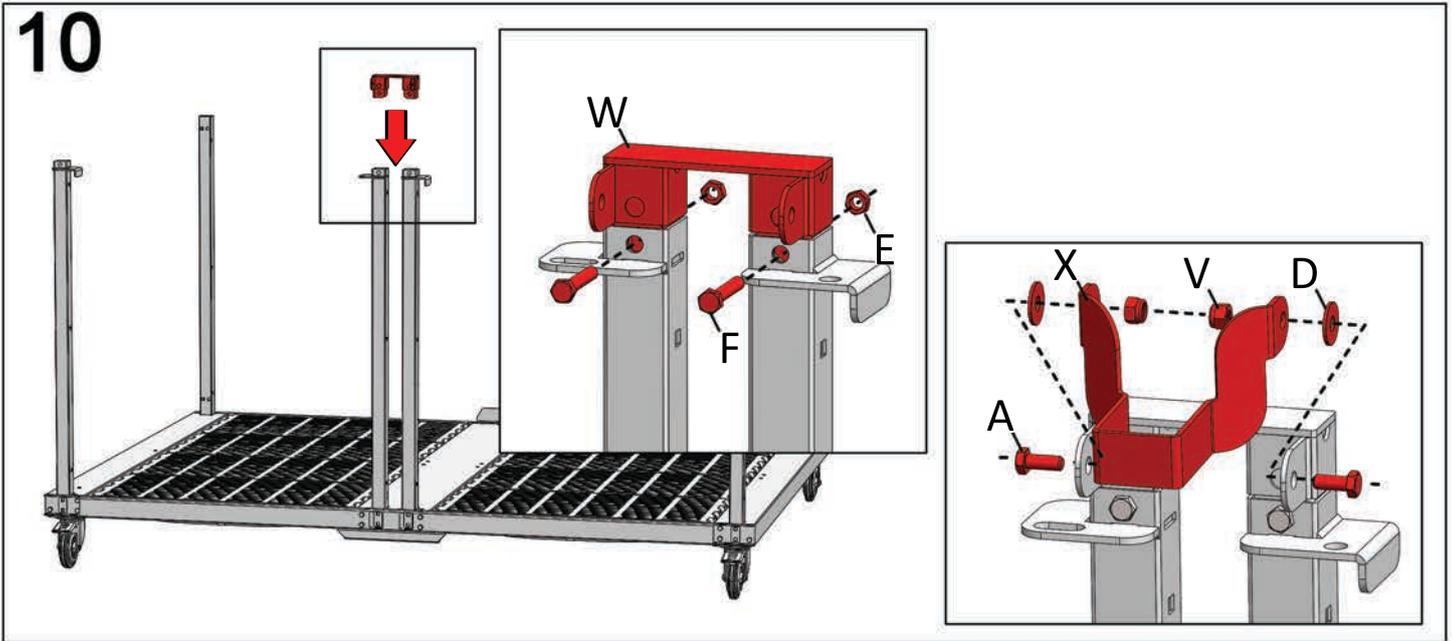

11

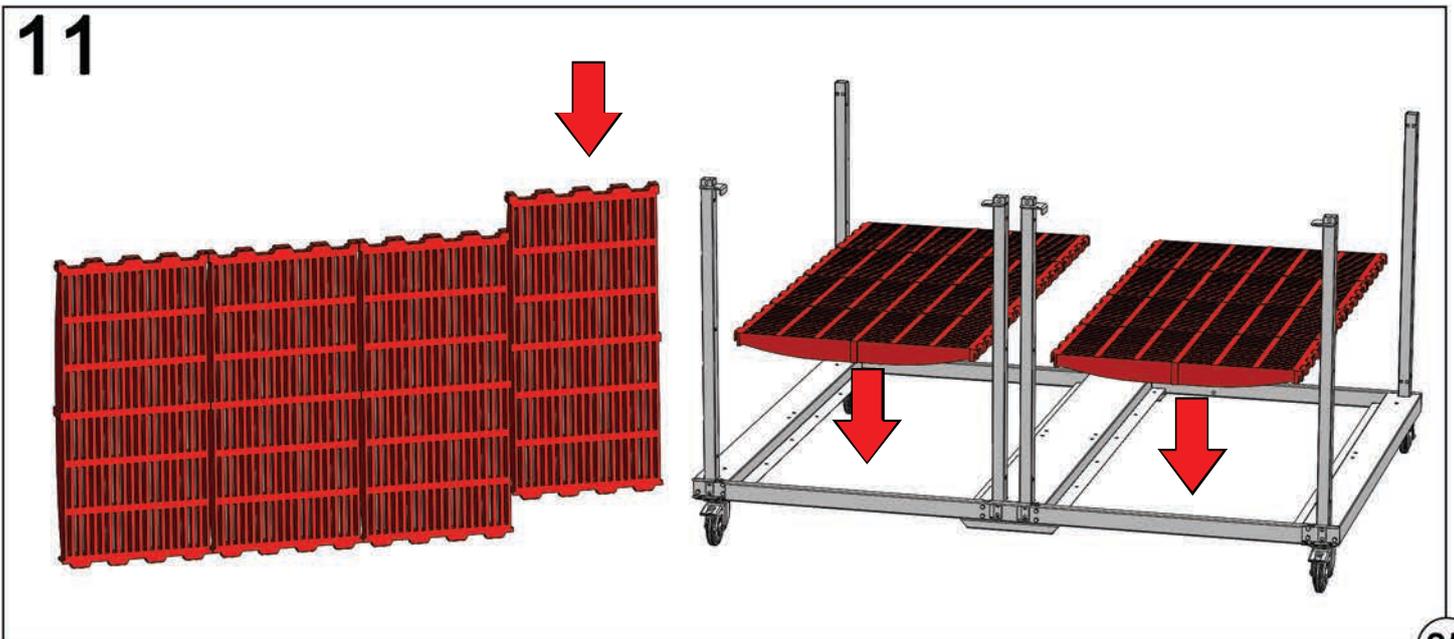

# 12

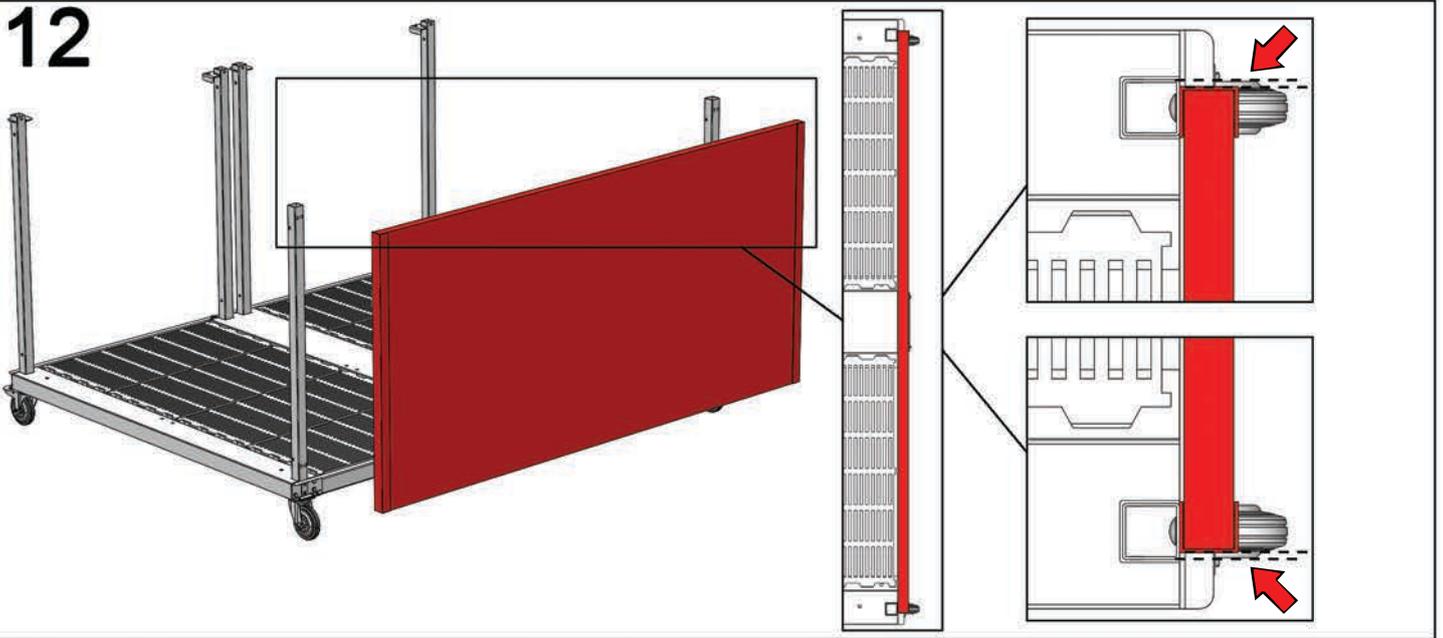


Art. Nr. 080060

**CALFOTEL**  
www.calfotel.com


© Rights reserved by VDK Products B.V. WWW.CALFOTEL.COM


04-2020

# 13

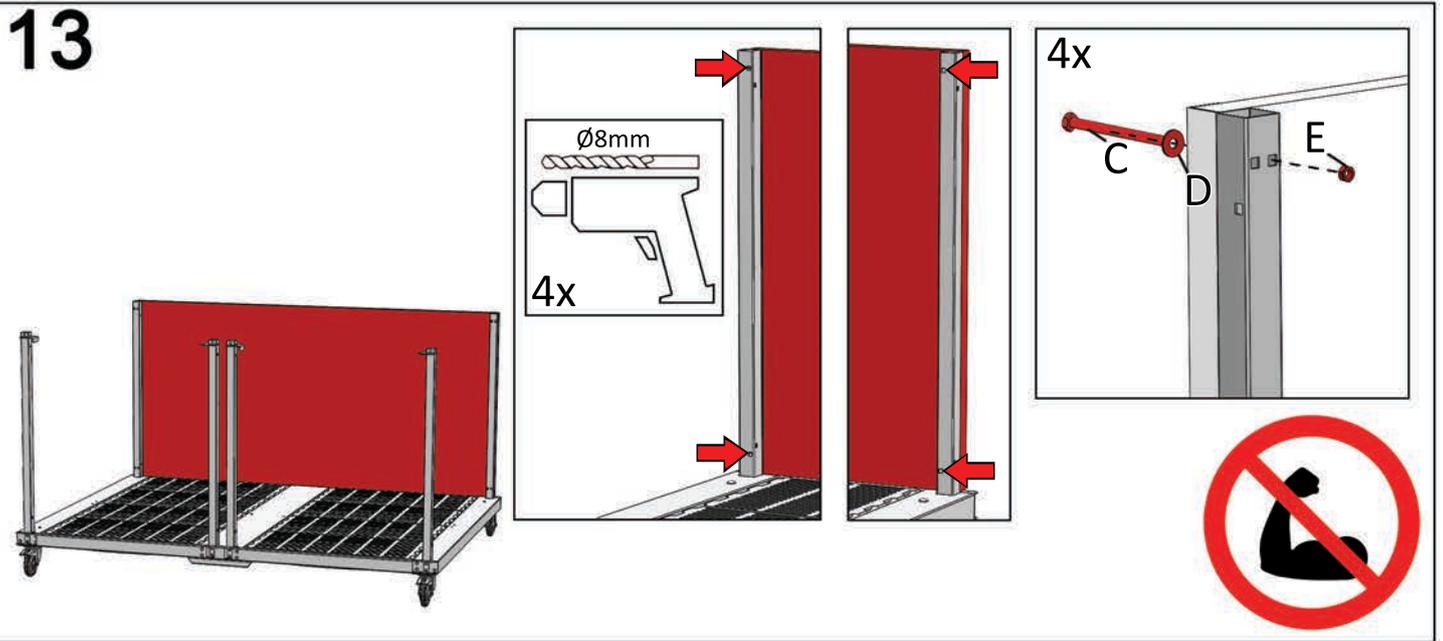

# 14

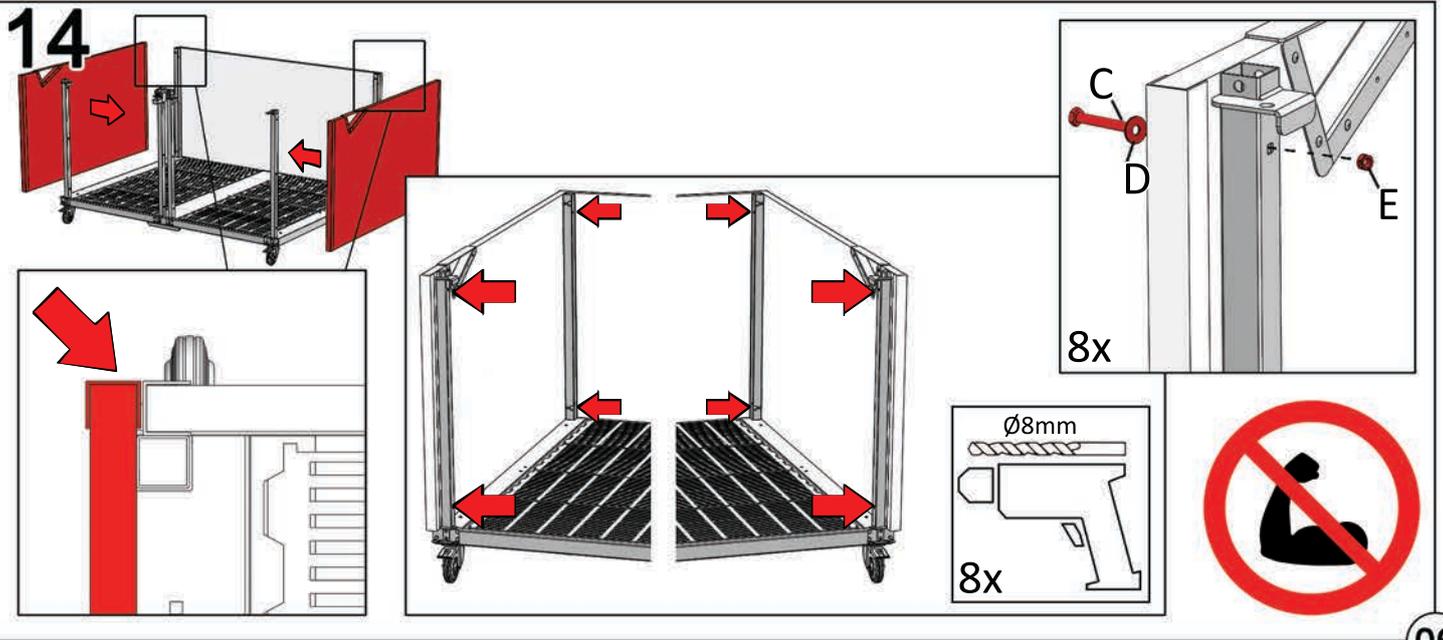

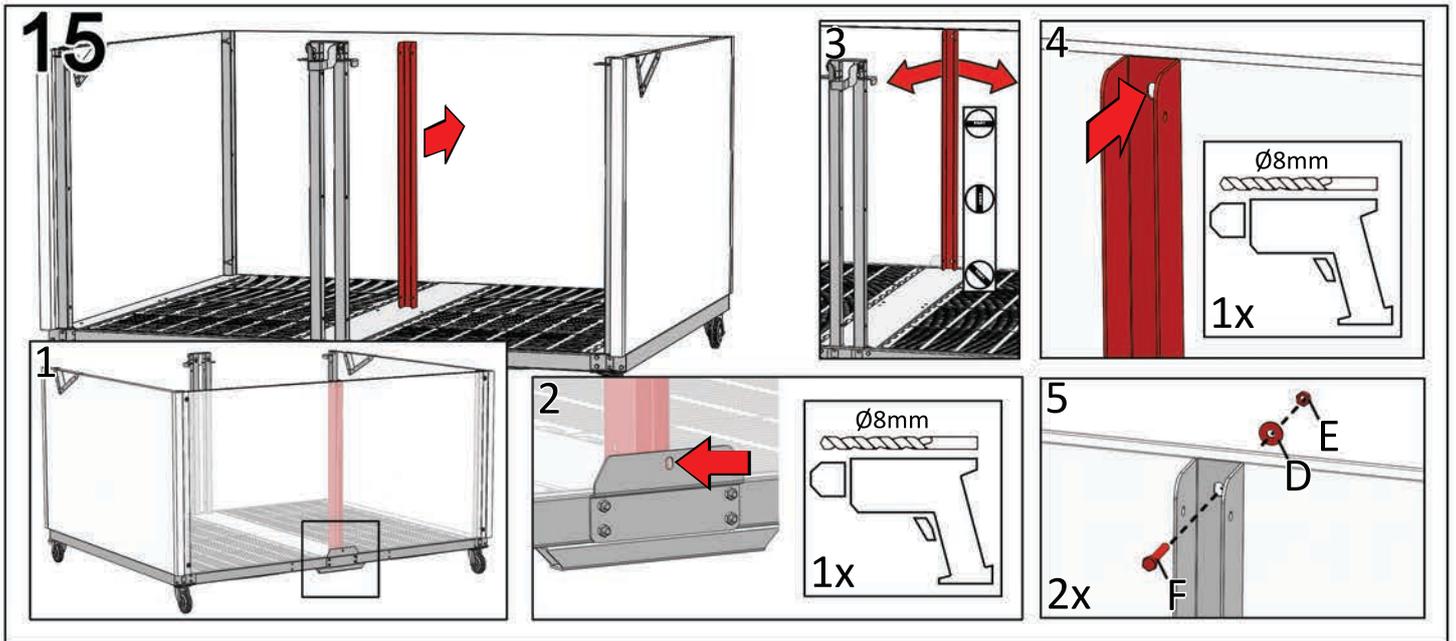

Art. Nr. 080060

**CALFOTEL**  
www.calfotel.com

© Rights reserved by VDK Products B.V. WWW.CALFOTEL.COM 04-2020

