

RAXIT® RTU

Made in Denmark

Doors and sliding doors




- Ready To Use
- Easy to Install

Raxit

For further information visit raxit.net




- Self-Drilling Stainless Steel Screw
Type nr: A2 4,8 mm x 32 or
Blind Rivet alu 4,8 x 14 mm
- Raxit® Ready-To-Use seal 1 m / 3 m
- Measuring tape
- Iron Saw
- Snipping Tool
- Power Drill

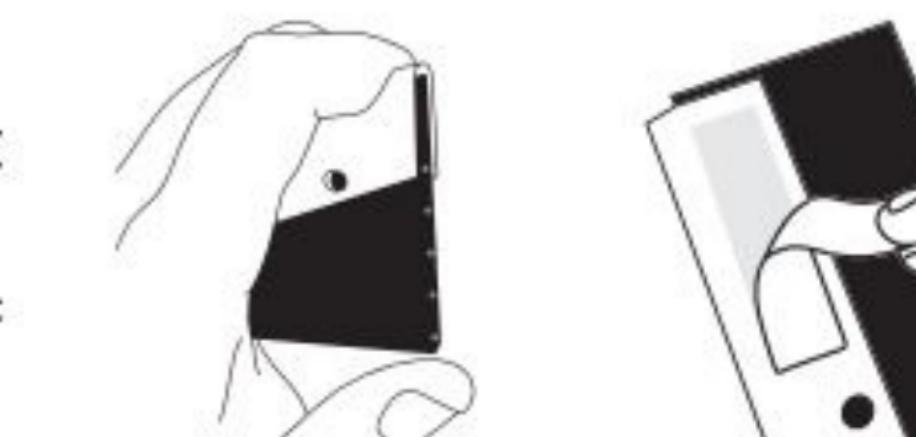


1

Measure the Door

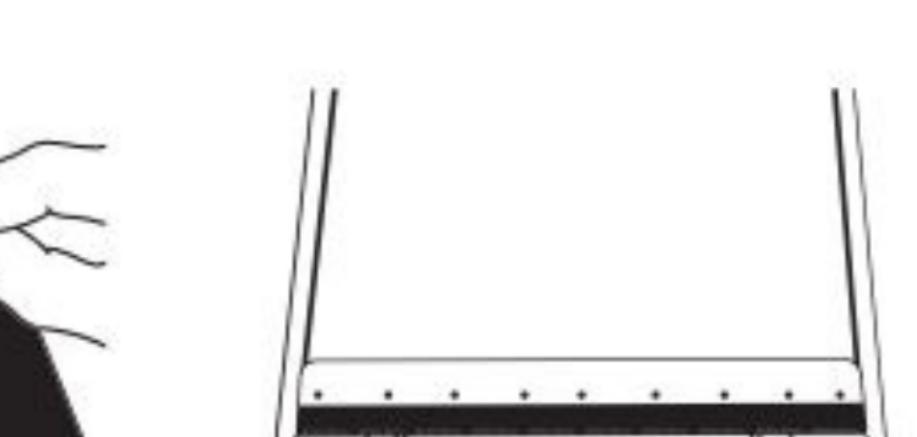


2

Cut the Raxit® Ready-To-Use
tightly into the
Aluminum Strip

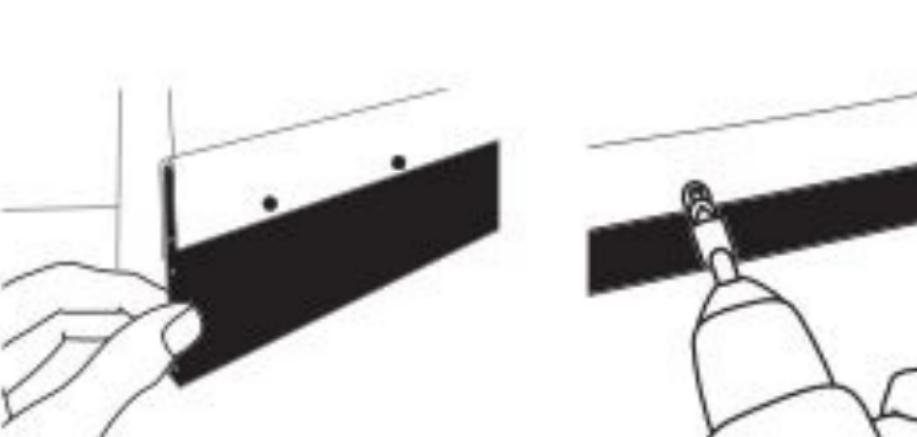

3

Place and Peel the
Santoprene
tightly into the
double-sided tape

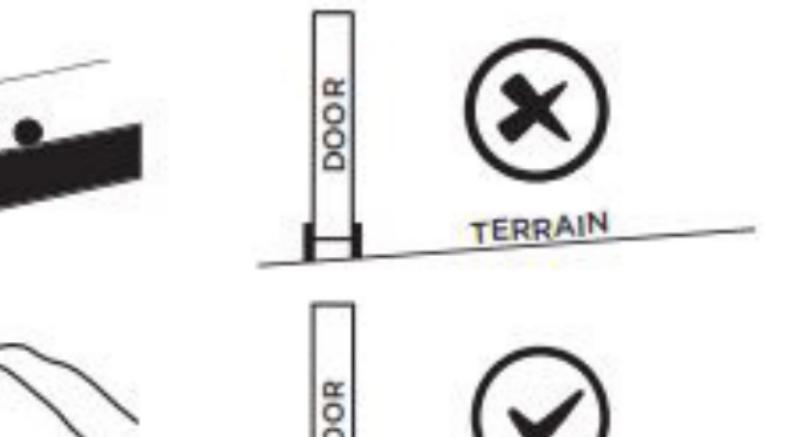

4

Attach with screws
or blind rivets
to the surface



5

The terrain in front of the
door should preferably fall
away from the door or have
a max increase of 1 cm/m