


The innovative FLEDBAG® lets you empty big bags easily, quickly and precisely. Any residual amounts can be left in the big bag for the next dispensing task. We recommend the use of the FLEDBAG® Easy for returnable big bags. Easy for returnable big bags.

## FLEDBAG®PROFI COMBINATION PACKAGE

Benefit from our attractive package deal!

FLEDBAG® is available individually or as part of a practical combined package.



MORE ON

[www.fledbag.com](http://www.fledbag.com)

## FLEDBAG® INNOVATIONS



### reinforced wedge tip

Easier penetration of the big bag fabric



### leak tightness

Innovative vario slide with an excellent leak tightness for flexible dosing



### stable + robust

Level upright position thanks to recessed connecting bolt

### flexible, folding handle



### Skewed depositing of the big bag – no problem!

Sometimes the big bag is still swinging slightly on lowering so that the FLEDBAG® Original can easily tip on penetrating the bag. The moving handle gives in, and nothing breaks.

### tremendous stability


The C-modified polyamide fibreglass compound resists the highest loads. No corrosion occurs!

### even more possibilities



We recommend the use of the FLEDBAG® Easy for returnable big bags. It was specially developed for use with returnable big bags.

Suitable for: animal feed, fertilizer, seeds, pellets, salt and granules.

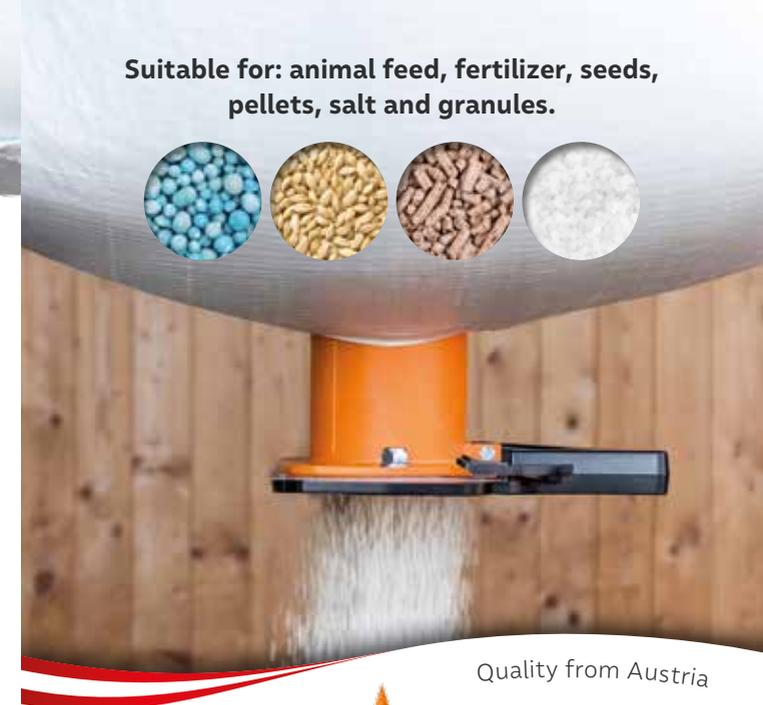

Quality from Austria



# FLEDBAG®

The flexible dispenser for big bags

[www.fledbag.com](http://www.fledbag.com)

EN

# FLEDBAG® ORIGINAL

for all big bags

## FUNCTIONAL PRINCIPLE:



1 Deposit the FLEDBAG® on a firm surface. Lift the big bag by its loops using front loader or forklift forks, and position above the FLEDBAG®.



2 Lower the big bag so that the FLEDBAG® penetrates the big bag, then raise the big bag again.



3 Pull the FLEDBAG® down slightly to make it easier to open and close the valve.



4 By opening and closing the FLEDBAG®, you can simply meter the content of the big bag.

# FLEDBAG® EASY

for returnable big bags

## FUNCTIONAL PRINCIPLE:



1 Open the first knot on the big bag outlet and push the tensioning ring onto the protruding discharge hose.



2 Position the FLEDBAG® Easy on the discharge hose from underneath.



3 Pull the tensioning ring down, and fasten the tensioning ring with the discharge hose on the FLEDBAG® Easy. Do not attach the tensioning ring at the top edge, but along the neck of the FLEDBAG®.



4 Open the second knot on the outlet so that the content can run into the FLEDBAG® Easy. Open the slide to empty.