

Storage & Fitting Instructions

AC01-P-00-070-00

Glove Connector



AlphaTec®



Version 15/11/24

For additional information visit us at www.ansell.com, or call us at:

Europe, Middle East & Africa Region

Ansell Healthcare Europe NV
Riverside Business Park
Blvd International, 55
1070 Brussels, Belgium
T: +32 2 528 74 00
F: +32 2 528 74 01

Asia Pacific Region

Ansell Global Trading Center
(Malaysia) Sdn Bhd
Prima 6, Prima Avenue
Block 3512, Jalan Teknokrat 6
63000 Cyberjaya
Selangor, Malaysia
T: +60 3 8310 6688
F: +60 3 8318 6699

North America Region

Ansell Healthcare Products LLC
111 Wood Avenue South,
Suite 900
Iselin, NJ 08830, USA
T: +1 800 800 0444
F: +1 800 800 0445

Latin America & Caribbean Region

Ansell Commercial México S.A. de C.V.
Bvld. Bernardo Quintana No. 7001-C,
Q7001 Torre II.
Suites 1304, 1305 y 1306.
Col. Centro Sur, C.P. 76079
Querétaro, Qro. México
T: +52 442 248 1544 / 248 3133

Australia

Ansell Limited
Level 3, 678 Victoria Street,
Richmond, Vic, 3121
Australia
T: +61 1800 337 041
F: +61 1800 803 578

Ansell, ® and ™ are trademarks owned by Ansell Limited or one of its affiliates. © 2024 Ansell Limited. All Rights Reserved. MICROGARD® garments are designed and manufactured under an ISO 9001 quality control approved system. Neither this document nor any other statement made herein by or on behalf of Ansell should be construed as a warranty of merchantability or that any Ansell product is fit for a particular purpose. Ansell assumes no responsibility for the suitability or adequacy of an end user's selection of product for a specific application.

WWW.ANSELL.COM

Ansell

Storage


No special storage conditions are required however storing the AlphaTec® Glove Connector at room temperature of 18-20°C prior to fitting will ensure the polymeric material is slightly more pliable and will aid fitting.

Warnings & Limitations of Use


- Prior to use inspect glove connector for any signs of damage. Do not use if any signs of damage
- Do not connect the glove on top of the coverall sleeve as the glove will not be securely attached
- Do not use AlphaTec® glove connector for any glove sizes or designs that cannot be fitted as per these instructions. Product selection for appropriate protection is the responsibility of the user
- Submersion of gloved hands into hazardous liquids above the wrist is not recommended.
- The AlphaTec® Glove connector does not form a Gas Tight seal.
- Product maybe re-used providing they have been suitably decontaminated and there is no physical damage to either part.
- Keep away from naked flames and high heat sources




Step 1 - Push the narrow end of the ribbed grey cone into the glove.

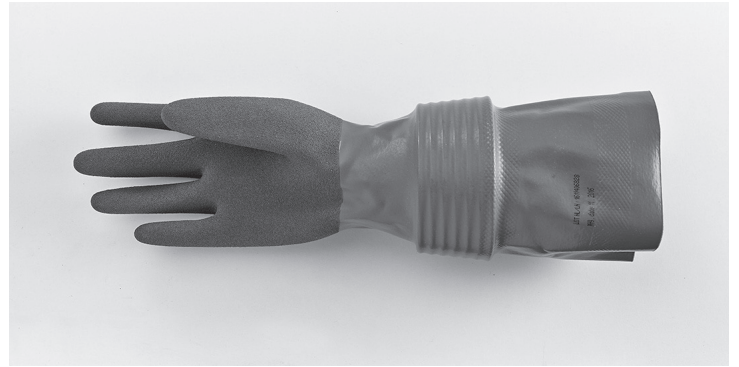


Step 2 - Ensure the glove fully covers the grey cone.

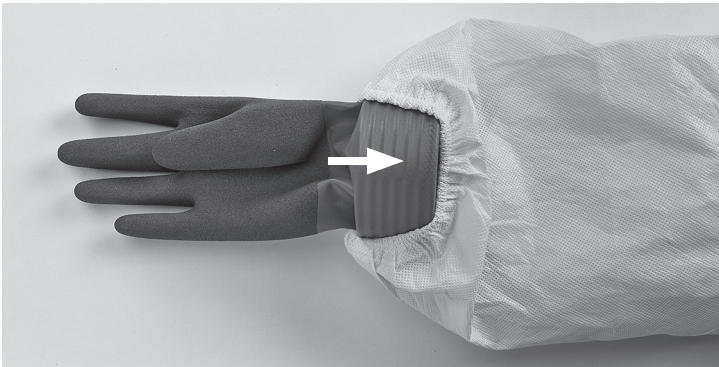


Step 3 - Push the glove with the cone fitted up into the sleeve making sure the cone within the glove is fully covered by the sleeve as shown in step 4. If double sleeve, use the outer.

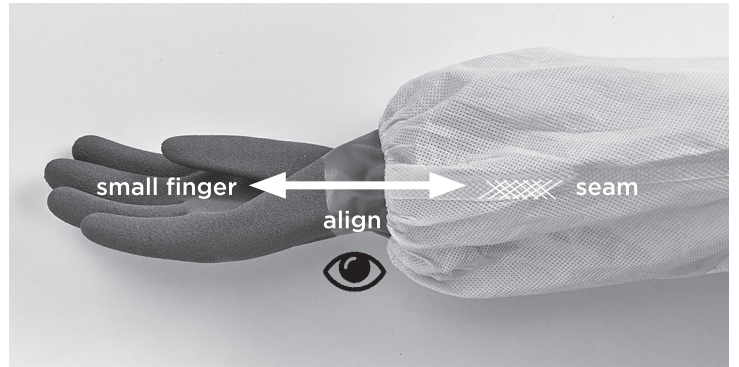

Step 4 - Align the small finger of the glove with the seam on the sleeve of the coverall as this will ensure the glove is in the correct orientation.

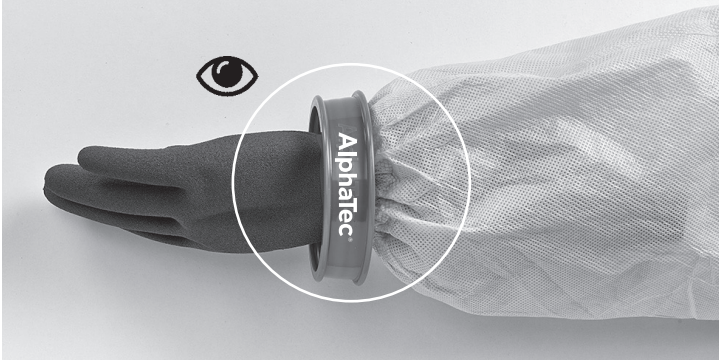


Step 5 - Pass the glove through the AlphaTec® green outer ring. Note ring orientation - the logo on the ring needs to be as shown above.

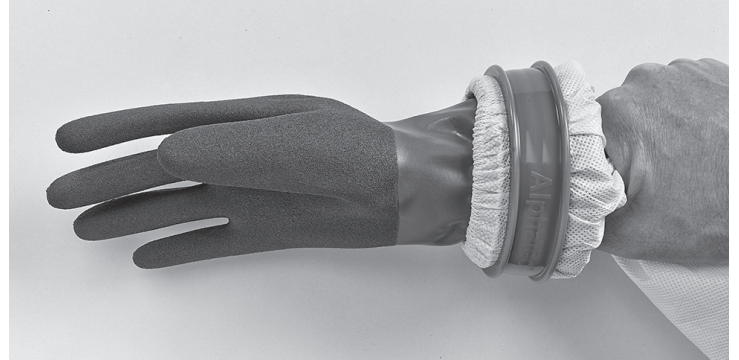

Step 6 - Hold the sleeve of the coverall as shown and check there are minimal creases on the sleeve end and gently push the AlphaTec® green collar up the sleeve so that the sleeve cuff is exposed and the collar is beginning to tighten on the inner glove cone.



Step 7 - Using both hands push the AlphaTec® ribbed green collar further up the sleeve until tightly locked in position. Ensure outer ring is tightened as far as possible to provide a secure fit.

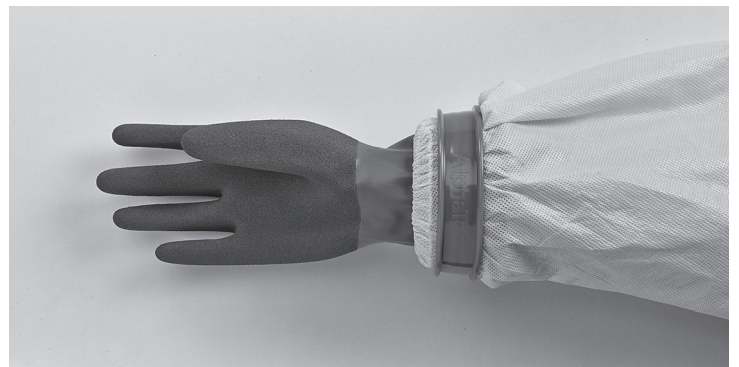

Step 8 - Pull on the glove and sleeve to check the AlphaTec® Glove connector is fitted correctly and if loose then repeat Step 7.